


Wahl® Trimmer Quickstart Guide


1. Charge Unit

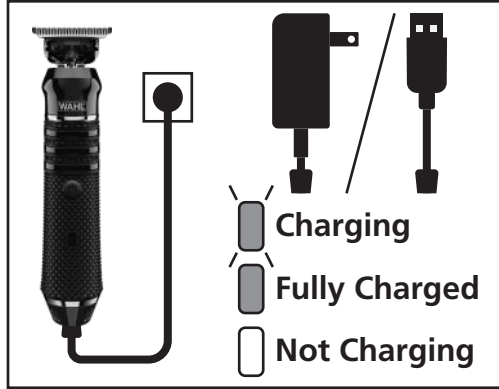

2. Disable/Enable Travel Lock



3. Attach Desired Grooming Head

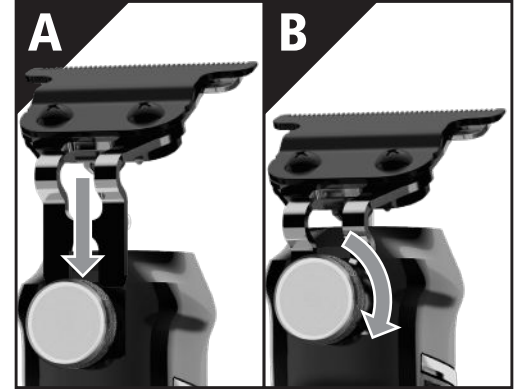

4. Select Guide Comb & Attach



5. Rinse Trimmer



6. Oil Blades

