



**For Model Numbers:**

8250L  
1251  
1264

**Language Contents**

en English.....	5	fr Français .....	13
es Español .....	9	pt Português.....	15

**en English**

**OPERATION:**

Turn unit on/off  
Two Speed: Push the power switch to (1) for the low speed and to the (2) for the high speed. To turn unit off push the power switch to the center position (0).

**CHANGING THE CUTTING HEAD (BLADE) FIG.A**  
The clipper should be switched off before removing blades. The cutting head can be removed by pressing the gray button under the blade and pushing the blade away from the housing.

To refit the blade set, the clipper should be turned on and running. (FIG.B) Fit the blade into the metal guide and press it into place. There will be a definite "click" when the blade is snapped in place.

**BLADE CARE AND OILING**

In order to ensure that you get the most life and performance out of the clipper, we recommend oiling daily. To oil it properly, the clipper should be held so the blades are in a downward position. Place one drop of Wahl oil in the center of the movable top blade and one drop of oil on each end of the top blade. Turn clipper switch ON and run to distribute the oil. When oil is evenly distributed, turn clipper OFF and wipe off excess oil with a soft cloth. Periodically oil heel of blade (shown in image) to reduce blade friction. (USE WAHL OIL ONLY) **WIPE OFF EXCESS OIL** so it does not run into the motor compartment. Oil in the motor compartment will eventually lead to poor motor performance. Blades should be oiled after using disinfectant or sanitizing solution.

Noise level: < 63 dB(A) @ 9,8 in. with standard blade / < 68 dB(A) @ 9,8 in. with wide blade  
Vibration: < 3,0 m/s<sup>2</sup> ±15%

**en DESCRIPTION OF PARTS**      **es DESCRIPCIÓN DE LAS PIEZAS**

- |                         |                                    |
|-------------------------|------------------------------------|
| A. Blade set            | A. Cabezal de cuchilla             |
| B. On/off switch        | B. Botón de encendido/apagado      |
| C. Blade latch          | C. Pasador de la cuchilla          |
| D. Blade release button | D. Botón de liberación de cuchilla |
| E. Blade retainer       | E. Retenedor de la cuchilla        |

**fr DESCRIPTION DES PIÈCES**      **pt DESCRIÇÃO DAS PARTES**

- |                                   |                                 |
|-----------------------------------|---------------------------------|
| A. Ensemble de lame               | A. Conjunto de lâminas          |
| B. Interrupteur de marche/arrêt   | B. Botão liga/desliga           |
| C. Loquet de la lame              | C. Trava da lâmina              |
| D. Bouton de dégagement des lames | D. Tecla de liberação da lâmina |
| E. Bande de fixation de la lame   | E. Retentor da lâmina           |

**SWITCH MODE POWER SUPPLY**

*Manufacturer:* E-Tek Electronics Manufacturing Co., No. 5, Jingye Road, Yanchuan, Songgang Town, Baoan District, Shenzhen, Guangdong, China

*Type:* ZD024B120200 - Adapter 9050A-1

*Input voltage:* 100-240 V

*Input AC frequency:* 50/60 Hz

*Output voltage:* 12.0 V

*Output current:* 2.0 A

*Output power:* 24 W

*Average active efficiency:* 86.2%

*Efficiency at a low load (10 %):* 76.2 %

*No-load power consumption:* 0.075 W

**FCC For Products Marked with an FCC Approval:**

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
- Consult the dealer or an experienced radio/TV technician for help.



USA: For warranty terms, please visit [wahlpro.com/warranty](http://wahlpro.com/warranty) or call 1-800-766-9245

Canada: For warranty terms, please visit <https://ca.wahl.com/pages/frequently-asked-questions>  
Call 1-866-787-9245

Pour les conditions de garantie, veuillez visiter <https://ca.wahl.com/fr/pages/frequently-asked-questions>  
Appeler 1-866-787-9245

For servicing, please ship your product prepaid to:  
Si necesita servicio, envíe su producto con franqueo prepagado a:  
Pour l'entretien, veuillez expédier votre produit prépayé à :

**Wahl Service Center**  
3001 North Locust Street  
Sterling, IL 61081

For servicing or repair of products purchased in Canada, please contact  
Pour l'entretien ou la réparation des produits achetés au Canada, veuillez nous contacter au

**1-866-787-9245 or [info@wahlcanada.com](mailto:info@wahlcanada.com)**



en es fr pt

**CORDED 2-SPEED CLIPPERS**  
**OPERATING MANUAL**  
**MANUAL DE OPERACIÓN | MANUAL D'UTILISATION**

part no: 3027327

[www.wahlpro.com](http://www.wahlpro.com)  
Wahl® is a registered trademark of Wahl Clipper Corporation  
© 2024 (Rev.05/24)

