

E-Z Nail Clipper Operating Instructions

Important Safeguards:

When using your trimmer, basic precautions should always be followed, including the following:

- Read all instructions before using.
- Use this appliance only for its intended use as described in this manual. Do not use with damaged or broken blade as injury may occur.
- To avoid bodily injury, children should be supervised to ensure that they do not play with this appliance. This appliance should not be used by children or invalids. This appliance is not a toy.
- When discarding old batteries, do not throw them into a fire where heat could cause them to rupture. Also do not attempt to recharge alkaline, heavy-duty or regular batteries in a nickel cadmium battery recharger.

Precautions:

- Do NOT immerse in liquid. Do NOT operate if wet.
- Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
- Do not use attachments not recommended by the manufacturer.
- Ensure grinding attachments are properly secured before switching the grinder to the "ON" position.
- Safety glasses should be worn at all times when using the nail grinder. Long hair should be tied back and jewelry should be removed to avoid any contact with moving parts of the grinder.
- While in use, grinder should only be in contact with pet's nail, no other substance.
- While in use, ensure your pet does not touch or lick the grinder.
- To avoid any injury to pet's nails, do not over-grind or apply excessive pressure.
- Do not attempt to repair grinder if damaged.

How to Clip Dogs Nails

Keep your pet's nails trimmed properly for greater comfort & well being.

- Make sure the dog is relaxed and comfortable.
- Have the dog sit, and talk to him softly to keep him calm.
- Always include a favorite treat during the session and at the end.
- Have a styptic powder or cornstarch readily available in plentiful amount.
- Grasp the foot from the ankle up in the palm of your hand, firmly but gently.
- Take a look at your dog's nails. With clear or light color nails, you should be able to see the "quick" which looks like a tiny tube inside the nail center. With black or dark nails, you have to be very careful because you won't be able to see the quick.
- Tighten/loosen the adjustable clipper guard to prevent cutting too much of the nail off.
- Position the claw into the clipper.
- Trim off a little of each nail. **Be sure to avoid trimming into the "quick"**.
- If bleeding occurs, use styptic powder or corn starch to stop the flow of blood.
- If you experience trouble, ask your pet supply dealer, groomer, or veterinarian for advice on nail trimming.



Quick



What To Do If Accidentally Hit The Quick:

If by chance you happen to hit the quick of a nail and the nail starts to bleed, don't allow your dog to wrench away from you and run around. Hold him firm and reassure him that you know it hurts, your pet trusts you. You also need to get styptic or corn starch onto the end of the nail. Simply keep the original grasp you had on the paw and press the powder to the end of the nail until the bleeding stops. You may have to keep packing powder for two to three minutes, but the longer you are able to apply steady pressure, the more effectively you will stop the bleeding. Don't be concerned if your dog wants to lick the wound after initial bleeding stops. Do keep him from prancing about for at least fifteen minutes. Bleeding should stop within 15 minutes, if the nail is bleeding freely after 30 minutes of applying pressure and powder call your veterinarian.

E-Z Nail Filer Operating Instructions

- File your pet's nails to smooth the rough edges and prevent splitting and breaking of nails.
- Using your thumb, apply light to moderate pressure to animal's pads in order to separate their toes. Hold paw firmly.
- To avoid tangling of hair on long-haired breed dogs, push hair away from pet's paw before applying the grinder.
- Turn grinder "ON". The "ON/OFF" switch is located on the front of the clipper.
- For best results, start grinding from the bottom of the nail, slowly moving toward the tip. Apply consistent pressure, moving the grinder from side-to-side of each nail.
- **Caution:** Do not over-grind or apply excessive pressure.
- For larger dogs, position the front paw forward in order to grind nails.
- For smaller dogs, hold their paw up and position it below their body.



Before Filing - After Filing



Changing Attachments

- Ensure grinder is in the "OFF" position before changing attachments.
- 1. Remove filer tip compartment cover from bottom of clipper by snapping off.
- 2. Pull filer tip straight off & replace with new tip.
- 3. Replace filer tip compartment back to original position.

 


Maintenance

- After each use, remove any debris and dust from grinder by using a soft brush.
- To clean housing, use a soft, dry cloth.
- For maximum efficiency, ensure grinding attachments and sanding bands are properly replaced when worn or blunt.
- Periodically examine tool for any wear or damage. See Service, Repair and Guarantee.

Battery Installation/Replacement

1. Remove battery compartment from bottom of clipper by twisting off.
2. Insert one AA alkaline battery into trimmer.
3. Replace battery compartment cover to original position.



Service and Repair

This appliance contains no user-serviceable parts.

Any servicing should be done by Wahl Service Department.

Do not return this product to the store where purchased. If you have problems with your clipper, send it prepaid with a note explaining the problem to:

Wahl Clipper Corporation
Attn: Service Department
3001 Locust Street
Sterling, Illinois 61081
Telephone: 1-800-PRO-WAHL or visit www.wahl.com

For products purchased outside the United States or Europe, contact your distributor.

Limited Warranty: This warranty valid only for sales in the Continental United States. For sales outside of the Continental United States contact local distributor for warranty and terms.

If your Wahl product fails to operate satisfactorily within one (1) year from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace it and return it to you FREE OF CHARGE. Our warranty does not cover blades, which are wear-out parts. Please mail your product prepaid to Wahl Clipper Corporation, Sterling, Illinois 61081,

Attention: Service Department, with a note describing the defect and the date of original purchase or receipt as a gift (if in warranty). Products out of warranty will be repaired at our standard repair charges. The warranty is void and no repair or replacement will be made under this warranty or otherwise if:

1. The product is modified in any manner.
2. The product is repaired by anyone other than Wahl Clipper Corporation.
3. The product has been subjected to unreasonable use.

This warranty gives specific legal rights and you may also have other rights, which may vary from state-to-state. No other written express warranty is given. Any implied warranty including any warranty of merchantability, which may arise from purchase or use, is limited to the one-year period provided in this express warranty. Some states may not allow such limitation, so it may not apply to you. No responsibility is assumed for accidental or consequential damages of any type, or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion may not apply to you.

Wahl Clipper Corporation
2900 Locust Street / PO Box 578
Sterling, Illinois 61081
Phone 1.800.PRO.WAHL / 815-625-6525
www.wahl.com

E-Z Nail

by



All-In-One NAIL CLIPPER



NAIL FILER

Battery Operated Rotary File

part# 93240-100