

# IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS AND SAFEGUARDS BEFORE USING THIS APPLIANCE. When using an electrical appliance, basic precautions should always be followed, including the following:

## DANGER:

- To reduce the risk of electrical shock.
1) Do not reach for appliance that has fallen to water. Unplug immediately.
2) Do not use while bathing or in a shower, tub or sink. Do not place or drop into water or other liquid.
4) Always unplug this appliance from electrical outlet immediately after using.
5) Unplug this appliance before cleaning.

## WARNING:

- To reduce the risk of burns, fire, electrical shock, or injury to person.
1) An appliance should never be left unattended when plugged in.
2) Close supervision is necessary when this appliance is used by, on or near children or invalids.
3) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
4) Never operate this appliance if it has a damaged cord or plug if it is not working properly, if it has been damaged or dropped in water. Return the appliance to Wahl Clipper Corporation for examination and repair.
5) Keep the cord away from heated surface.
6) Never operate this appliance with the air opening blocked or while on a soft surface, such as a bed or a couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
7) Never drop or insert any object into any opening.
8) Do not operate where aerosol (spray) products are being used, where oxygen is being administered or near flammable liquids, such as certain flammable blade lubricants or cleaning agents.
9) Do not use this appliance with damaged or broken comb, as injury may occur.
10) During use, do not place or leave appliance where it may be damaged by an animal or exposed to weather.

## TO REMOVE:

- 1) Shut clipper off and slide Blade Adjustment forward.
2) Pivot Blade Attachment away from blade teeth and off.

## BLADE SELECTION GUIDE

The convenient, thumb-adjustable, multi-cut lever found on most Wahl Clippers provides for increased cutting variations with fewer blades. In the uppermost position, cut is very fine and becomes gradually coarser as the lever is moved downward. The following chart illustrates the cutting range of each set of blades according to accepted pet industry grooming standards.

## CLIPPING LENGTH GUIDE: plastic blade attachments

The Blade Attachment Lever should always be in the "fine" position when the Blade Attachments are being used.

Table with 3 columns: TYPE OF BLADE AND BLADE ATTACHMENT, DIRECTION OF CLIPPING, LENGTH OF CUT (approximate) FINE COARSE. Includes rows for Wahl Regular Blade Without Attachment #1037 and various cutting lengths like 1/32" to 1/8" and 1/16" to 3/16".

## ATTACHMENTS #1037

\*The variables affecting length of cut are greater at these heights even though clipping is normally done with the grain.

## CLIPPING THE HEAD

- 1) Cut an upside down "V" between the eyes and down the nose. DO NOT cut above the eyes.
2) Clip the muzzle-clip away from the eyes toward the nose.
3) Hold your dog's head and clip the bottom of the muzzle (Figure #15). The Adam's apple area is usually the stopping point of cut but you may clip lower.
4) Clip the rest of the throat area toward the muzzle. The face and throat look like the outline in Figure #12 thru #15.

## CLIPPING THE STOMACH

- 1) Stand dog facing you.
2) Lift front legs and begin clipping from a point above the testicles or vulva and clip in a straight line to the end of the rib cage. DO NOT clip up the leg.
3) DO NOT NICK or cut the vulva, penis, testicles or nipple. Cover them with your free hand while clipping. Use light pressure.
4) Clip the hair on the penis WITH the grain.
5) The clipped part of the stomach should resemble a rectangle.

## CLIPPING THE BODY

- 1) Clip along the back starting at the base of the skull, and cut down the middle of the back to the tail (Figure #17).
2) Shorten all hair as shown in Figure #17 by using the clipper in the same direction. Start from the neck and go to the back.
3) Figure #18-Clip the hair between shoulders and hips.
4) Clip hair under the chest from behind the front legs to the end

Certain sanitizing solutions and spray lubricants may cause stress crack damage to clippers. We recommend blade lubrication and cleaning with WAHL CLIPPER OIL ONLY.
12) To disconnect, turn all controls to "off," then remove plug from outlet.

## SAVE THESE INSTRUCTIONS

This clipper has been designed for household use.
CORD CARE
The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord untwisted and unobstructed.
To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits in a polarized outlet only one way. In the event the plug does not fit fully in the outlet, reverse the plug. In the event it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

## FACTS ABOUT BLADES & CUTTING

- 1) The blades are the single most important part of this clipper.
2) Blades do not become dulled from cutting hair—they are dulled by the abrasive particles on the hair; dirt, sand, etc.
3) Clipper blades should be oiled BEFORE, DURING, AND AFTER clipping; most clipper problems are due to a lack of oil to lubricate and cool.
4) Blades will not cut if abrasive particles are picked up and carried by the oil film between the blades. These particles tend to hold the blades apart and cause chewing and pulling instead of clean cutting.
5) Oiling the blades performs two, distinct functions:
• Provides a low friction, very thin film lubricating between the cutting blades so that they can take a full cutting stroke without becoming hot from frictional heat.
• Flushes abrasive particles and hairs out from between the blades.

## HOW TO OPERATE YOUR WAHL CLIPPER

Table with 4 columns: Blade Attachment #, Grain direction, Length (5/32" to 7/32", 1/8" to 1/4", 1/4" to 1/2", 1/2" to 3/4", 3/4" to 1").

## STAINLESS STEEL BLADE ATTACHMENTS

With the STAINLESS STEEL BLADE ATTACHMENTS, Wahl brings you another time-saving development in pet grooming. Three sizes to give you the widest range of cutting heights WITH NO BLADE CHANGING.
-Improved Feed since it goes through most thick and matted hair easily.
-Improved cutting since it lifts and guides hair OVER the Clipper teeth without snagging.
-Polished Tips that won't scratch even delicate skin.
-Designed to quickly attach and lock securely in place.
-Fits all models of Wahl Clippers.
-These attachments enable you to increase the cutting range of any Wahl Blade Set in 1/4" increments, allowing for a longer cut without the purchase of additional blade sets.
--NOTE: These attachment combs are not compatible with the Model 1037-600 extra wide blade set.

## GROOMING HORSES

- 1) Stand dog up and brush the hair on the back of the legs in an upward and outward motion to fluff the hair.
2) You can now shape the legs as full or tapered as you wish.
3) Start by trimming any hair that falls over the foot (Figure #19).
4) Then start at the ankle and cut up to the hip (Figure #20).
5) Cut just a little hair at a time.
6) Once you get up to the hip, start blending the hair so that it is tapered into the shorter body hair.
7) Scissor cut the other back leg, making it the same size as the other leg.
8) Clip the inside of the ear first, and then the outside.
9) Hold the ear with your free hand and scissor cut the sides. Be careful not to cut the ear itself. (Figure #24).
10) Clip the other ear.
11) With scissors, touch up any stray hairs.
12) With the Schnauzer, it is most important that it is trimmed at least once before the ear cropping is done, usually completed at 12 weeks of age. Otherwise, your schnauzer will probably associate clipping with cropping and the next few grooming sessions will be most difficult.
13) Stand dog on grooming table. Clip the top of the back from the base of the skull to the base of the tail. Clip the throat, front and sides of the body and the tail. Clip all the areas with the grain. Clip sides and back of rear legs toward the hock; remove the sides into the hook and do not clip the front of the rear legs. Curve Blade Attachment #1.
14) Clip stomach areas. Stand the dog on the front, clip penis carefully with the grain. Clip skull from a point above the eyebrows to the base of the skull and to the ears. Clip from the outside corner of the eyes to the base of the ears and to the corner of the mouth.
15) Set the Blade Adjustment Lever midway between "fine" and "coarse," #15 position, and clip both sides of the ears from the base to the tip.
16) Scissor and trim front legs to gain a rounded and straight appearance. Scissor and trim body and rear legs; do the same with eyebrows, muzzle and mustache. The purpose is to achieve a straight and square look.
17) If you plan to show your terrier and he has wire coat, striping, or not clipping is required. However, clipping is a far easier method of grooming for both pet and groomer as the Schnauzer except for the rear legs. Use the Wahl Regular blade.
18) If you want to show your terrier and he has wire coat, striping, or not clipping is required. However, clipping is a far easier method of grooming for both pet and groomer as the Schnauzer except for the rear legs. Use the Wahl Regular blade.
19) If you plan to show your terrier and he has wire coat, striping, or not clipping is required. However, clipping is a far easier method of grooming for both pet and groomer as the Schnauzer except for the rear legs. Use the Wahl Regular blade.
20) If you plan to show your terrier and he has wire coat, striping, or not clipping is required. However, clipping is a far easier method of grooming for both pet and groomer as the Schnauzer except for the rear legs. Use the Wahl Regular blade.
21) If you plan to show your terrier and he has wire coat, striping, or not clipping is required. However, clipping is a far easier method of grooming for both pet and groomer as the Schnauzer except for the rear legs. Use the Wahl Regular blade.
22) If you plan to show your terrier and he has wire coat, striping, or not clipping is required. However, clipping is a far easier method of grooming for both pet and groomer as the Schnauzer except for the rear legs. Use the Wahl Regular blade.
23) If you plan to show your terrier and he has wire coat, striping, or not clipping is required. However, clipping is a far easier method of grooming for both pet and groomer as the Schnauzer except for the rear legs. Use the Wahl Regular blade.
24) If you plan to show your terrier and he has wire coat, striping, or not clipping is required. However, clipping is a far easier method of grooming for both pet and groomer as the Schnauzer except for the rear legs. Use the Wahl Regular blade.

## PRECAUCIONES IMPORTANTES

LEA TODAS LAS INSTRUCCIONES Y PRECAUCIONES ANTES DE USAR ESTA CORTADORA. Cuando se está usando un electrodoméstico, deben seguirse unas precauciones básicas, incluyendo las siguientes:

## PRECAUCIÓN:

- 1) No intente recuperar un electrodoméstico que se haya caído en agua. Desenchúfelo inmediatamente.
2) No use un cuando se está enchufado o bañando.
3) Nunca use este electrodoméstico si la salida de aire está bloqueada o mientras esté en una superficie blanda, como una cama o un sofá, donde se pueden bloquear esas salidas de aire. Mantenga las salidas de aire libres de residuos, pelo, y similares.
4) Nunca use este electrodoméstico si la salida de aire está bloqueada o mientras esté en una superficie blanda, como una cama o un sofá, donde se pueden bloquear esas salidas de aire. Mantenga las salidas de aire libres de residuos, pelo, y similares.
5) Nunca inserte o deje caer algún objeto en ninguna apertura.
6) No use este electrodoméstico donde se estén usando productos de aerosol, donde se está administrando oxígeno o cerca de líquidos inflamables, como algunos lubricantes de cuchillas o aceites limpiadores.
7) No use este electrodoméstico con uno de los peines roto o

## PELIGRO:

- 1) Un electrodoméstico no se debe dejar desatendido mientras está enchufado.
2) Se necesita una supervisión cercana cuando este electrodoméstico está siendo usado por o cerca de niños o personas discapacitadas.
3) Use este electrodoméstico solamente para el uso al que ha sido destinado como se describe en este manual. No use accesorios no recomendados por el fabricante.
4) Nunca use este electrodoméstico si tiene el cable dañado o si el enchufe no está funcionando correctamente, o si ha caído en agua u otro líquido.
5) Desenchúfele siempre este electrodoméstico de la red inmediatamente después de su uso.
6) Desenchúfele este electrodoméstico antes de limpiarlo.

## ¡AVISO!

Ciertas lubricantes de Soluciones y de spray que desinfectan pueden causar daños a la cortadora.
Recomendamos lubricación de cuchillas y limpieza con el aceite WAHL CLIPPER OIL ONLY.

By following these simple steps, your Wahl Quality Pet Clipper will provide years of satisfactory service.
1) OIL For maximum efficiency, your clipper blades MUST be oiled with each haircut. Place one or two drops of oil on blades while clipper is running. If clipper is brand new or hasn't been used your clipper blades are dry—they require oiling. DO NOT use a heavy oil use only Wahl Clipper Oil.
2) POWER SCREW (Not found on all models of Wahl Clippers) If your clipper has a power screw, it will have been adjusted for peak efficiency before leaving the factory. However, if voltage in your home is low, you may need to re adjust it. To adjust power screw, use the plastic brush, a screwdriver or a thin coin to turn power screw in a clockwise direction until the arm strikes the coil, making a noise. Then, slowly turn power screw out (counterclockwise), just until noise stops. This is the maximum power setting.
3) BLADES Do not try to sharpen the clipper blades. Once they are dull, the only way to sharpen them is to return them to the blades. Also, never wash the blades in water. When the blades do not cut, they may need oiling or resharpening. If you determine the blades need resharpening, you can return them to Wahl Clipper Corp. for resharpening. If you decide to do so, remove the blades from the clipper, pack each blade individually in soft wrapping paper, enclose both blades in a durable container and send to Wahl Clipper Corp., 3001 Locust Street, Sterling, IL 61081-ATTN: Service Dept. A nominal fee will be charged for resharpening. To remove cutting blades for sharpening or replacement, loosen and remove the 2 screws on bottom blade. Replace same and retighten.
4) BLADE ALIGNMENT Blades must be realigned if they have been removed for cleaning or replacement.
• If your clipper has a taper lever - position the taper lever in the close cut position.
• End of top blade teeth should be approximately 1/32" (64mm) back from bottom blade.
• This is important so that the clipper does

- When clipping large animals, care should be taken as some animals may be nervous around the noise and vibration of the clipper.
BEFORE YOU CUT
1) Make sure clipper is clean and in perfect working condition.
2) Sponge down your horse with clean water and towel dry. Then comb and brush the longer mane and tail.
CUTTING THE HAIR
1) Start with the front legs. Clipping with the grain (or lay) of the hair will give a slightly longer cut. The leg can be clipped while the hoof is on the ground or with the leg in your hand. Clip the fetlocks, being careful around joints and projections. Proceed with all four legs.
2) Clip the hair around the muzzle, chin and ears. All the hair on the outside of the ears can be clipped, but avoid clipping the hair on the inside. Be careful, also, when clipping the hair on the edges of the ears; do not hold the clipper with the blades pointing toward the edges, but parallel to the edges.
3) If you wish to shorten the hair on the mane and tail, hold the hair between your index and middle fingers with the amount of hair you wish to cut protruding above your fingers. Then cut that hair off with a parallel stroke across fingers.
4) To thin the hair on the tail and mane, hold your clipper upside down with the blades pointed in toward the hair. Then, starting at the top of the hair and lightly stroking downward in a combing-like manner, remove just a little hair at a time.
5) Hair on the body of the horse can either be cut or left longer for weather protection and additional padding. Remember when clipping, that less hair is removed when cutting with the grain; more hair is removed when cutting against the grain of the hair.
6) When you are finished, clean the clipper and oil the blades before packing it away.
FITTING BEEF CATTLE
When clipping large animals, care should be taken as some animals may be nervous around the noise and vibration of the clipper. A suggestion before fitting your cattle would be to wash your animal with mild animal shampoo and towel dry. Air blow and brush the hair forward up toward the ears. Be sure the hair is dry before you begin to clip. Before clipping, gain the animal's confidence. Do this by approaching the animal slowly, making sure the animal is aware of your presence. A gentle rubbing of the side of the animal should be sufficient. With the WAHL #10 STANDARD BLADE, start clipping the animal's neck or throat. Clip the hair on the top of the neck, which will give a slightly shorter cut. Clip up to the bottom of the animal's head and down to the brisket. Clip the hair on the belly up to the brisket. To increase the depth in the animal's body, leave the hair unclipped from the navel area back. Clip up the sides until you achieve cleanness and levelness in the underline. Clip the hair around the head, eyes and poll. When clipping the poll, leave about half the poll width unclipped in the center. Completely clip around the tail, approximately half way down to where the top of the tail ball is tied. Clip up to about where the tail starts to get thicker.
IMPORTANT: MAKE SURE CLIPPER IS SHUT OFF BEFORE ASSEMBLING ATTACHMENT COMBS.
BLENDING
Depending upon the length of cut, use the clipper with or without the attachment comb. To blend the hair from the shoulders to the neck and from the sides to the belly, hold your clipper upside down with the blades pointed in toward the hair. Then, lightly, starting at the top of the hair and stroking downward in a combing type manner, remove just a little hair at a time.
To clip the back of the animal, use the desired length attachment comb and clip from the tail head to behind the poll, establishing a straight line across the top of the animal. Try to achieve a wide blocked look by leaving hair longer in areas that need to be filled in.
FINA CLIPPING
Apply animal cosmetics, (i.e. adhesive, sun foam, final mist, etc.) to dress up the animal. Tease the end tail hair, tie the hair up and apply adhesive to form the ball shape. Comb hair into its final position, following by any final freehand trimming.
with the Blade Adjustment Lever in the "coarse," #10 position and install Blade Attachment #1. Do not clip the rear legs; blend the clipping of the sides into the hips. Scissor and trim the eyebrows, muzzle and mustache to the recognized standard of the particular breed.
COCKERS-SETTERS-SPANIELS
Sporting dogs generally require little clipping. However, all longhaired Sporting Dogs can be more effective in the field when properly groomed.
The hunting dog with long, silky hair needs to have his coat kept brushed, clean and free of burrs and tangles. Clipping your dog several weeks in advance of the hunting season will facilitate better hunting, offer greater comfort to the dog and provide easier coat care. Clipping allows the growth of the shorter, denser coat that is both warmer and more resistant to burrs and stickers. Checking your dog's diet to assure a prime coat is also very important.
1) Stand dog on grooming table. With the Wahl regular Blade and the Blade Adjustment Lever in the "coarse" position, clip the skull, base of the ears and the throat. Clip "With the Grain" and blend hair.
2) Clipping With the Grain, clip the neck, shoulders and chest, using the same blade, with the Blade Adjustment Lever in the "Fine" position, and Blade Attachment #1 installed. Blend the hair into the body and lower chest. Clip the legs and tail.
3) If it is needed, clip the body. Blade Attachment #5 is suggested-it will leave the hair about the 1/2" to 3/4" long. This type of clipping, even though it may detract from the dog's "looks" is a sensible approach for a dog used in hunting.
After a day in the field, go over your dog with a medium comb. A "tangle-remover" spray will help in getting rid of burrs. Check for and treat cuts and injured paws.
SERVICES AND REPAIR
This appliance contains no user-serviceable parts. Any servicing, other than changing of the blades, should be done by Wahl Service Department. Do not return this product to the store where purchased. If you
COMO OPERAR SU CORTADORA WAHL
Siguiendo estos simples pasos, su cortadora Wahl Quality Pet, le dará años de servicio satisfactorio.
1) ACEITE Para máxima eficiencia, las cuchillas de su cortadora DEBEN ser aceadas con cada corte de pelo. Coloque una o dos gotas de aceite en las cuchillas mientras la cortadora está funcionando. Si la cortadora es nueva o no ha sido usada las cuchillas de su cortadora están secas—requieren aceite. NO USE un aceite espeso. Use solamente aceite Wahl Clipper.
2) TORNILLO DE SINTONIZACIÓN (no se encuentra en todos los modelos de cortadoras Wahl.) El tornillo de sintonización tiene un tornillo de ajuste que se encuentra ajustado para la potencia perfecta antes de salir de fábrica. Sin embargo, si el voltaje en su casa es bajo, puede que tenga que reajustarlo. Para ajustar el tornillo de sintonización, use un cepillo de plástico, un destornillador o una moneda delgada para girar el tornillo en la dirección de las agujas del reloj, hasta que el brazo vibrador choque contra la bovina, haciendo un ruido. Después, lentamente apague el tornillo de sintonización (en dirección contraria a las agujas del reloj), justo hasta que el ruido pare. Esta será la máxima potencia.
3) CUCHILLAS No intente afilar las cuchillas de la cortadora. Una vez que se desafilan, es necesario el equipamiento especial para volver a afilarlas. Tampoco lave las cuchillas en agua. Cuando las cuchillas ya no cortan, pueden necesitar aceite o volver a afilarlas. Si usted cree que deben afilarse, puede devolverlas a Wahl Clipper Corp. para su afilado. Si decide hacer esto, saque las cuchillas de la cortadora, empaquete cada cuchilla individualmente en un papel suave, pongálas en un contenedor resistente y envíelas a Wahl Clipper Corp., 3001 Locust Street, Sterling, IL 61081-ATTN: Service Dept. Se cobrará una cantidad nominal por el afilado o sustitución. Para sacar las cuchillas, afloje y saque los dos tornillos de la cuchilla de abajo. Vuévalas a colocar y apriete.
4) ALINEADO DE LAS CUCHILLAS Las cuchillas deben realinearse si se han sacado para limpieza o reparación.
• Si su cortadora tiene una palanca de control—coloque la palanca en la posición de corte apurado (close cut)
• El extremo de la cuchilla de arriba debe estar aproximadamente a 1/32" (1.6mm) de la cuchilla de abajo.
• Esto es importante para que la cuchilla no corte demasiado apurado o permita que entre en contacto con la piel.
• El extremo izquierdo del diente de la cuchilla de arriba tiene que cubrir

- 5) TAPER LEVER Some Wahl Clippers are equipped with an adjustable taper lever. The taper lever is conveniently located near your thumb (if you're right-handed), so it can easily be adjusted while the clipper is in your hand. The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without a guide comb. When the lever is in the uppermost position, Pushing the lever downward gradually increases the cutting length. In its lowest position, the taper lever will leave the hair approximately the same length as the 1/8" guide comb. The taper lever will also extend the use of your blades since a different cutting edge is used in each setting. In addition, if extremely heavy haircutting has jammed the blades, it will help you remove hair that has become wedged between the two blades without removing the blades. While the clipper is running, rapidly move the lever from "close cut" to "longer cut" a couple of times. Doing this each time you've finished using your clipper will help keep the blades clear of cut hair. If your clipper stops cutting and this does not help, your cutting blades may be dull. Either replace them or return them to Wahl for sharpening.
CLIPPER CARE AND SERVICE
1) To clean the unit, use either a clean, dry or dampened cloth. DO NOT USE benzine or thinner to clean the unit.
2) Do not store the clipper in a wet or moist environment.
3) Do not touch any of the internal mechanisms. If the unit should need repair, do not repair it yourself. Return it to Wahl Clipper Corporation.
shampoo and towel dry. Air blow and brush the hair forward up toward the ears. Be sure the hair is dry before you begin to clip. Before clipping, gain the animal's confidence. Do this by approaching the animal slowly, making sure the animal is aware of your presence. A gentle rubbing of the side of the animal should be sufficient. With the WAHL #10 STANDARD BLADE, start clipping the animal's neck or throat. Clip the hair on the top of the neck, which will give a slightly shorter cut. Clip up to the bottom of the animal's head and down to the brisket. Clip the hair on the belly up to the brisket. To increase the depth in the animal's body, leave the hair unclipped from the navel area back. Clip up the sides until you achieve cleanness and levelness in the underline. Clip the hair around the head, eyes and poll. When clipping the poll, leave about half the poll width unclipped in the center. Completely clip around the tail, approximately half way down to where the top of the tail ball is tied. Clip up to about where the tail starts to get thicker.
IMPORTANT: MAKE SURE CLIPPER IS SHUT OFF BEFORE ASSEMBLING ATTACHMENT COMBS.
BLENDING
Depending upon the length of cut, use the clipper with or without the attachment comb. To blend the hair from the shoulders to the neck and from the sides to the belly, hold your clipper upside down with the blades pointed in toward the hair. Then, lightly, starting at the top of the hair and stroking downward in a combing type manner, remove just a little hair at a time.
To clip the back of the animal, use the desired length attachment comb and clip from the tail head to behind the poll, establishing a straight line across the top of the animal. Try to achieve a wide blocked look by leaving hair longer in areas that need to be filled in.
FINA CLIPPING
Apply animal cosmetics, (i.e. adhesive, sun foam, final mist, etc.) to dress up the animal. Tease the end tail hair, tie the hair up and apply adhesive to form the ball shape. Comb hair into its final position, following by any final freehand trimming.
with the Blade Adjustment Lever in the "coarse," #10 position and install Blade Attachment #1. Do not clip the rear legs; blend the clipping of the sides into the hips. Scissor and trim the eyebrows, muzzle and mustache to the recognized standard of the particular breed.
COCKERS-SETTERS-SPANIELS
Sporting dogs generally require little clipping. However, all longhaired Sporting Dogs can be more effective in the field when properly groomed.
The hunting dog with long, silky hair needs to have his coat kept brushed, clean and free of burrs and tangles. Clipping your dog several weeks in advance of the hunting season will facilitate better hunting, offer greater comfort to the dog and provide easier coat care. Clipping allows the growth of the shorter, denser coat that is both warmer and more resistant to burrs and stickers. Checking your dog's diet to assure a prime coat is also very important.
1) Stand dog on grooming table. With the Wahl regular Blade and the Blade Adjustment Lever in the "coarse" position, clip the skull, base of the ears and the throat. Clip "With the Grain" and blend hair.
2) Clipping With the Grain, clip the neck, shoulders and chest, using the same blade, with the Blade Adjustment Lever in the "Fine" position, and Blade Attachment #1 installed. Blend the hair into the body and lower chest. Clip the legs and tail.
3) If it is needed, clip the body. Blade Attachment #5 is suggested-it will leave the hair about the 1/2" to 3/4" long. This type of clipping, even though it may detract from the dog's "looks" is a sensible approach for a dog used in hunting.
After a day in the field, go over your dog with a medium comb. A "tangle-remover" spray will help in getting rid of burrs. Check for and treat cuts and injured paws.
SERVICES AND REPAIR
This appliance contains no user-serviceable parts. Any servicing, other than changing of the blades, should be done by Wahl Service Department. Do not return this product to the store where purchased. If you
COMO OPERAR SU CORTADORA WAHL
Siguiendo estos simples pasos, su cortadora Wahl Quality Pet, le dará años de servicio satisfactorio.
1) ACEITE Para máxima eficiencia, las cuchillas de su cortadora DEBEN ser aceadas con cada corte de pelo. Coloque una o dos gotas de aceite en las cuchillas mientras la cortadora está funcionando. Si la cortadora es nueva o no ha sido usada las cuchillas de su cortadora están secas—requieren aceite. NO USE un aceite espeso. Use solamente aceite Wahl Clipper.
2) TORNILLO DE SINTONIZACIÓN (no se encuentra en todos los modelos de cortadoras Wahl.) El tornillo de sintonización tiene un tornillo de ajuste que se encuentra ajustado para la potencia perfecta antes de salir de fábrica. Sin embargo, si el voltaje en su casa es bajo, puede que tenga que reajustarlo. Para ajustar el tornillo de sintonización, use un cepillo de plástico, un destornillador o una moneda delgada para girar el tornillo en la dirección de las agujas del reloj, hasta que el brazo vibrador choque contra la bovina, haciendo un ruido. Después, lentamente apague el tornillo de sintonización (en dirección contraria a las agujas del reloj), justo hasta que el ruido pare. Esta será la máxima potencia.
3) CUCHILLAS No intente afilar las cuchillas de la cortadora. Una vez que se desafilan, es necesario el equipamiento especial para volver a afilarlas. Tampoco lave las cuchillas en agua. Cuando las cuchillas ya no cortan, pueden necesitar aceite o volver a afilarlas. Si usted cree que deben afilarse, puede devolverlas a Wahl Clipper Corp. para su afilado. Si decide hacer esto, saque las cuchillas de la cortadora, empaquete cada cuchilla individualmente en un papel suave, pongálas en un contenedor resistente y envíelas a Wahl Clipper Corp., 3001 Locust Street, Sterling, IL 61081-ATTN: Service Dept. Se cobrará una cantidad nominal por el afilado o sustitución. Para sacar las cuchillas, afloje y saque los dos tornillos de la cuchilla de abajo. Vuévalas a colocar y apriete.
4) ALINEADO DE LAS CUCHILLAS Las cuchillas deben realinearse si se han sacado para limpieza o reparación.
• Si su cortadora tiene una palanca de control—coloque la palanca en la posición de corte apurado (close cut)
• El extremo de la cuchilla de arriba debe estar aproximadamente a 1/32" (1.6mm) de la cuchilla de abajo.
• Esto es importante para que la cuchilla no corte demasiado apurado o permita que entre en contacto con la piel.
• El extremo izquierdo del diente de la cuchilla de arriba tiene que cubrir

- groomed much more often than other breeds.
Clipping the Feet
1) The feet are cut with a Wahl Regular Blade #1037-400.
2) The adjustment lever is in the Coarse Position (#10 position)
3) Clipping is done "Against the grain" (Fig. #6)
(a) Sit the dog on the table facing you.
(b) Bring rear leg forward near front leg (Fig. #7)
(c) Clip sides of foot from NAIL to end of toes.
(d) Clip hair on top of toes using the natural stop at the ankle joint-do not trim up the ankle.
NOW—Set Blade Adjustment Lever in middle between COARSE and FINE (#15 Position). Use Wahl Regular Blade #1037-400.
(e) Being careful not to nick the foot webbing, use your free hand with the thumb on top (Fig. #8) and your forefinger, underneath to spread the toes apart. Cut the hair between the toes.
(f) Follow the same step and do the other 3 feet.
(g) Again grasp the rear leg and bring it toward you.
(h) Spread bottom pads with your thumb (Fig. #9) and cut hair between the toes and pads. Again, DO NOT NICK the webbing.
(i) Do the other three feet.
(j) Check feet for any stray hair.
Clipping the Tail
• Clipping the TOP of the tail is done AGAINST the GRAIN.
• Clipping the BOTTOM of the tail is done WITH the GRAIN.
Use Wahl Regular Blade #1037-400 with Blade Adjustment lever in #15 position.
1) Stand dog with his tail toward you.
2) Hold tail with free hand and cut the top and sides from the middle toward the body.
3) Clip bottom from the body toward the middle (Fig. #10).
4) Round off the ball at end of tail.
5) Use SCISSORS—Trim around pom-pom to make the largest ball possible (Fig. #11)
6) With SCISSORS: CAREFULLY clip around the anal

- opening.
Clipping Face and Throat
BLADE-WAHL REGULAR #1037-400
ADJ. LEVER SETTING-#15 POSITION
DIRECTION OF CUT-AGAINST THE GRAIN
CAUTION-This is a very sensitive area, too close of cut may cause razor burns.
SUGGESTION: You may want to "rough trim" the face and throat by first clipping WITH THE GRAIN.
BEFORE YOU START CUTTING read these points:
1) The area to be clipped (Figure 12 to 15).
2) Turn the ears back or place a rubber band behind the head.
3) Figure #12 shows the boundary of the area to be clipped.
4) The clipper is NOT used above the eyes.
5) Use a RUBBER BAND or CLOTH BAND to keep the topknot (bangs) out of the clipping area.
CLIPPING
1) Sit dog on table facing you.
2) Hold muzzle (upper jaw and nose area) shut with your free hand.
3) Begin your cut from left ear to the outside of the left eye in a STRAIGHT LINE.
4) With your left hand, stretch the skin at the outside corner of left eye upward and backward. Clip CAREFULLY under the eye. USE Figure #12 as your guide.
5) Do the same thing on the right side. Hold the clipper with your left hand and the muzzle with your right. Use Figure #13 as your guide.
6) Using the thumb of your free hand, keep the skin stretched at the corner of the mouth and your hand itself to hold the mouth closed.
• Clip around the mouth and lips.
• Clip the cheek and side of face.
• REVERSE the procedure on the other side
7) With your free hand, hold the muzzle and clip the area looking

- As the colors of the wires in the mains lead of this appliance may not correspond with the colored markings identifying the terminals in your plug proceed as follows.
The wire which is colored blue must be connected to the terminal which is marked with the letter N or colored black.
The wire which is colored brown must be connected to the terminal which is marked with the letter L or colored red.
If a 13 amp (BS 1363) plug is used, a 3 amp fuse must be fitted, or if any other type of plug is used, a 5 amp fuse must be fitted either in the plug or adapter at the distribution board. Replacement fuses should be ASTA approved to BS 1362.
Fuse cover must be fitted when changing the fuse. If fuse cover is lost, the plug must not be used until a replacement is obtained. Information for obtaining the correct fuse carrier is marked on the carrier itself and in the bottom of the fuse cavity on the plug. These may be obtained from Wahl Europe Ltd.
If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
WAHL CLIPPER CORPORATION
2900 LOCUST STREET / PO BOX 578
STERLING, ILLINOIS 61081
PHONE 1-800-PRO-WAHL / 815-625-6525
www.wahl.com
Wahl UK, Ltd
Herne Bay Trade Park
Sea Street, Herne Bay
Kent CT6 8JZ, England
Phone (44) 1227 740066
FAX (44) 1227 37563
es muy fino y se va volviendo más grueso, conforme la palanca se va moviendo hacia abajo. El siguiente esquema ilustra los diferentes tamaños de corte de cada juego de cuchillas, según aconsejan los guías de la industria de peluquería animal.
GUÍA DE LARGOS DE CORTE: accesorios de cuchilla de plástico
La palanca del accesorio de cuchilla debe estar siempre en la posición fina (Fine), cuando los accesorios de cuchilla se estén usando.
TIPO DE CUCHILLA DIRECCIÓN DE CORTE LARGO DE CORTE Y ACCESORIO DE CORTE (Aproximado)
CUCHILLA FINO GRUESO
Wahl Regular #1037
Contra la raíz del pelo 1/32" a 1/8"
Cuchilla sin accesorio #1037
En la dirección de la raíz 1/16" a 3/16"
\*Las variables que afectan al largo de corte son más grandes que estas medidas, aun que el corte se realice normalmente en la dirección de la raíz.
Accesorio de cuchilla #1
Contra la raíz del pelo 5/32" a 7/32"
Er ción de la raíz 1/8" a 1/4"
Accesorio de cuchilla #2
En la dirección de la raíz 1/4" a 1/2"
Accesorio de cuchilla #3
En la dirección de la raíz 1/2" a 3/4"
Accesorio de cuchilla #4
En la dirección de la raíz 3/4" a 1"
ACCESORIOS DE CUCHILLA DE ACERO INOXIDABLE
Con los ACCESORIOS DE CUCHILLA DE ACERO INOXIDABLE WAHL le brinda otra gran herramienta de ahorro de tiempo en la peluquería animal.
Tres tamaños para darle la más amplia selección de largos de corte SIN TENER QUE CAMBIAR LA CUCHILLA.
--Un funcionamiento mejorado, ya que pasa a través del pelo más espeso y anudado, fácilmente.
especial para que estas cuchillas alcancen un nivel de afilado supremo.
7) Sea cuidadoso en no dejar caer su cortadora o golpear con algo las cuchillas grande en la cuchilla de arriba.
8) Nunca coloque siempre el protector de cuchilla cuando no está usando la palanca de control está convenientemente situada cerca de su dedo pulgar (si usted usa su mano derecha), de forma que puede ser ajustada cómodamente mientras la cortadora está en su mano. La palanca de control añade versatilidad a su cortadora y le permite cambiar gradualmente la clase de corte que necesita sin que se desafilan.
9) Mantenga las cuchillas afiladas. Corte el pelo de los animales cuando esté limpio. PARTICULAS EXTRANAS que entren en las cuchillas causarás que se desafilan.
10) Pase la cortadora a través del pelo solamente a la velocidad a la que es posible realizar el corte. Pasaría por el pelo demasiado rápido, puede atascarse y no cortar el pelo apropiadamente.
11) Evite presionar las cuchillas demasiado fuerte contra la piel, siendo especialmente cuidadoso alrededor de las orejas.
12) Mantenga las cuchillas afiladas. Corte el pelo de los animales cuando esté limpio. PARTICULAS EXTRANAS que entren en las cuchillas causarás que se desafilan.
13) Las cuchillas cuando están afiladas cortarán mejor y más rápido. PARA UN AUTÉNTICO AFILADO DE FABRICA, retire y devuelva las cuchillas a: Wahl Clipper Corp., 2902 L Locust St., Sterling, IL 61081, ATTN: Repair Dept. Se cobrará un importe nominal por el afilado.
Si desea CUCHILLAS NUEVAS, éstas están disponibles en la tienda de productos Wahl. Se recomienda que siempre se extra de cuchillas normales Wahl, de forma que así tenga siempre un juego de repuesto a mano.
TO PEINE ACCESORIO DE CUCHILLA:
1) Apague la cortadora y ponga la palanca de ajuste de la cuchilla en la posición Fina (Fine).
2) Sujetando el Accesorio de la cuchilla en la palma de la mano, cierre los muñecos de cuchilla #3
3) Deslice el accesorio de cuchilla en su lugar, como se indica en la Figura 3.
4) ASEGÚRESE de que el Accesorio de Cuchilla esté correctamente instalado, antes de encender la cortadora. Las cuchillas pueden dañarse seriamente si el Accesorio de Cuchillas entra en contacto con los dientes de las cuchillas de la cortadora.
TO DESMONTAJE:
1) Apague la cortadora y deslice el Accesorio de Cuchilla hacia delante.
2) Gire hacia fuera de los dientes de la cuchilla el Accesorio y saque.
GUÍA DE SELECCIÓN DE CUCHILLAS
La palanca multi-corte, ajustable con el pulgar, más conveniente, y que se encuentra en la mayor parte de las cortadoras Wahl, proporciona diferentes variaciones de corte con menos cuchillas. En su posición más alta, el corte

- not cut too close or allow the moving cutter to touch the skin.
• Extreme left-hand tooth of top blade must be covering or to the left of the first small tooth of bottom blade.
• Extreme right-hand tooth of top blade must be touching the back tooth on the bottom blade.
• If blade alignment is incorrect, add a few drops of oil to the blades, turn clipper "ON" for a few moments, turn "OFF" and unplug. Loosen screws slightly and adjust. Tighten screws after blades are aligned.
5) TAPER LEVER Some Wahl Clippers are equipped with an adjustable taper lever. The taper lever is conveniently located near your thumb (if you're right-handed), so it can easily be adjusted while the clipper is in your hand. The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without a guide comb. When the lever is in the uppermost position, Pushing the lever downward gradually increases the cutting length. In its lowest position, the taper lever will leave the hair approximately the same length as the 1/8" guide comb. The taper lever will also extend the use of your blades since a different cutting edge is used in each setting. In addition, if extremely heavy haircutting has jammed the blades, it will help you remove hair that has become wedged between the two blades without removing the blades. While the clipper is running, rapidly move the lever from "close cut" to "longer cut" a couple of times. Doing this each time you've finished using your clipper will help keep the blades clear of cut hair. If your clipper stops cutting and this does not help, your cutting blades may be dull. Either replace them or return them to Wahl for sharpening.
CLIPPER CARE AND SERVICE
1) To clean the unit, use either a clean, dry or dampened cloth. DO NOT USE benzine or thinner to clean the unit.
2) Do not store the clipper in a wet or moist environment.
3) Do not touch any of the internal mechanisms. If the unit should need repair, do not repair it yourself. Return it to Wahl Clipper Corporation.
When you are finished, clean your clipper and oil the blades before packing it away (refer to instructions on CARE AND SERVICES).

- GROOMING AND STYLING YOUR DOG
Assemble your supplies: Clipper, oil, blades, screwdriver, slicker brush, attachment combs and comb, scissors, tear-free shampoo, dryer, rubber band, mat.
Be sure all your equipment is in good working condition and easy to reach.
Grooming should be done on a solid table (about 30" high) with a non-slip surface to give your dog a steady and secure footing. A grooming stop to secure the dog would be of considerable aid. Good lighting is essential. The light should be adequately bright and evenly distributed; there should be no shadows.
Steps in Grooming
1) Brush out coat thoroughly
(a) Remove all snarls, knots, tangles and mats.
(b) Part the hair and brush on "1" sections-brush from the skin out.
2) Bath Time
(a) Soak the dog thoroughly.
(b) Apply shampoo and work into a good lather.

