

WAHL® PROFESSIONAL

FLEXION NAIL GRINDER

UL Model 8010

Operating Instructions for Flexion Nail Grinder

Instrucciones de uso del rebajador de uñas Flexion

Instructions d'utilisation pour la meuleuse à griffes à flexion

© 2022 Wahl Clipper Corporation
Part No. 3023207 Printed in China

LIMITED WARRANTY

Valid in U.S.A. Only
This warranty valid only for sales in the Continental United States. For sales outside of the Continental United States contact your local distributor for warranty and terms.

If your Wahl product fails to operate satisfactorily within one (1) year from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace it and return it to you FREE OF CHARGE. Our warranty does not include wear-out parts, such as sanding bands. Not intended for commercial use. Please mail your product prepaid to Wahl Clipper Corporation, Sterling, Illinois 61081, Attention: Service Department, with a note describing the defect and the date of original purchase or receipt as a gift (if in warranty). Products out of warranty will be repaired at our standard repair charges. The warranty is void and no repair or replacement will be made under this warranty or otherwise if:

1. The product is modified in any manner.
2. The product is repaired by anyone other than Wahl Clipper Corporation or Authorized Service Center.
3. The product has been subjected to unreasonable use.

This warranty gives specific legal rights and you may also have other rights, which may vary from state to state. No other written express warranty is given. Any implied warranty including any warranty of merchantability, which may arise from purchase or use, is limited to the one (1) year period provided in this express warranty. Some states may not allow such limitation, so it may not apply to you. No responsibility is assumed for accidental or consequential damages of any type, or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion may not apply to you.

Wahl Clipper Corporation
3001 Locust Street
P.O. Box 578
Sterling, Illinois 61081
Phone: 1.800.PRO.WAHL
www.wahl.com

1

2

3

4

5

6

7

Please also reference the diagram (FIG. 1) for the appropriate angle for trimming the nail.

What To Do If You Accidentally Hit The Quick

If by chance you happen to hit the quick of a nail and the nail starts to bleed, don't allow your dog to wrench away from you and run around. Hold him firm and reassure him that you know it hurts, your pet trusts you. You also need to get styptic or corn starch onto the end of the nail. Simply keep the original grasp you had on the paw and press the powder to the end of the nail until the bleeding stops. You may have to keep packing powder for two to three minutes, but the longer you are able to apply steady pressure, the more effectively you will stop the bleeding. Don't be concerned if your dog wants to lick the wound after initial bleeding stops. Do keep him from prancing about for at least fifteen minutes. Bleeding should stop within 15 minutes, if the nail is bleeding freely after 30 minutes of applying pressure and powder call your veterinarian.

MAINTENANCE AND STORAGE

-After each use, remove any debris and dust from grinder by using a soft brush.

-To clean housing, use a soft, dry cloth.

-For maximum efficiency, ensure grinding attachments and sanding bands are properly replaced when worn or blunt.

-Store in a dry environment at temperatures above 0°C (32°F) or below 45°C (113°F).

-Periodically examine tool for any wear or damage. See Service and Repair.

-To order replacement accessories, please contact Wahl at 1-800-PRO-WAHL.

9

10

11

12

13

14

15

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following.

READ ALL INSTRUCTIONS AND SAFEGUARDS BEFORE USING THIS GRINDER.

DANGER

To reduce the risk of death or injury by electric shock:

1. Do not reach for appliance if it has fallen into water.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
3. This appliance should be disconnected from the charging source once fully charged.

WARNING

To reduce the risk of burns, electrical shock or injury to persons:

1. This appliance can be used by children aged from 14 years and above and persons with reduced physical, sensory or mental capabilities

or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate appliance if it is not working properly, if it has been dropped or damaged, or dropped into water. Return to an Authorized Service Center for examination or repair.
4. Only insert the USB charging cable provided into the USB port.
5. Do not use outdoors or operate where aerosol (spray) or other flammable products are being used or where oxygen is being administered.
6. Do not contact moving parts. Do not touch the collet or attachment after use. These may be hot and cause burns to the skin.
7. To turn off, press the power button until the indicator light goes out.
8. Always wear safety glasses when using

appliance. Do not wear loose jewelry or clothing when in use. Keep long hair pulled back out of work area.

9. Do not allow animal to lick or touch the appliance during use.
10. To prevent damage to the nail, do not hold the sanding band in one place on nail or apply excessive pressure to the nail while grinding.
11. Make sure attachments are securely in place before use. Before each use, check that the sanding drum is sufficiently secure to the sanding band during use. If sanding band is loose during operation, it may be ejected from grinder and cause injury.
12. During use, do not place or leave appliance where it may be damaged by an animal or exposed to the weather.
13. Prevent unintentional starting. Ensure the switch is in the off-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
14. Do not use an appliance that is damaged or modified. Damaged or modified appliances or batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

15. Do not crush, disassemble, heat above 100°C (212°F), or incinerate the appliance, due to risk of fire, explosion, or burns.
16. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
17. Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
18. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
19. For an appliance that includes USB charging capabilities only use with a USB power source on a certified product, such as on a computer, receptacle lamp, class 2 power supply, or automotive adaptor. Never use an unapproved USB power source.
20. Always attach plug to appliance first, then to outlet.

5

MEDIDAS DE SEGURIDAD IMPORTANTES

Cuando use un aparato eléctrico, siempre debe tener en cuenta las precauciones de seguridad básicas, que incluyen las siguientes:

LEA TODAS LAS INSTRUCCIONES Y MEDIDAS DE SEGURIDAD ANTES DE USAR ESTE REBAJADOR.

PELIGRO

Para reducir el riesgo de muerte o lesiones por descarga eléctrica:

1. No tome un rebajador de uñas que se haya caído en el agua.
2. No coloque ni guarde el aparato donde pueda caerse o ser arrastrado a una tina o un fregadero. No lo coloque ni lo deje caer en el agua u otro líquido.
3. Este aparato debe desconectarse del cargador cuando esté completamente cargado.

ADVERTENCIA

Para reducir el riesgo de quemaduras, descargas eléctricas o lesiones a personas:

1. Este aparato puede ser utilizado por niños de

14 años de edad en adelante y por personas con capacidades físicas, sensoriales o mentales reducidas, o que carezcan de experiencia y conocimientos, si han recibido supervisión o instrucción por parte de una persona responsable de su seguridad respecto al uso del aparato de manera segura, y si comprenden los peligros que conlleva. Los niños no deben jugar con el aparato. Los niños no deben realizar la limpieza ni el mantenimiento sin supervisión.

2. Use este aparato sólo para su uso previsto, según se describe en este manual. No use accesorios no recomendados por el fabricante.
3. Nunca use el rebajador de uñas si no funciona correctamente, si se ha caído o dañado o si se ha sumergido en agua. Llévelo a un centro de servicio autorizado para que lo examinen o reparen.
4. Solamente inserte el cable de carga USB incluido en el puerto USB.
5. No lo use al aire libre, ni en lugares donde se usen productos en aerosol (rociadores) u otros productos inflamables, o donde se administre oxígeno.
6. No toque la mordaza o el accesorio después de usarlo. Pueden estar calientes y causar quemaduras en la piel.

5

21. This appliance contains batteries that are only replaceable by skilled persons.
22. Do not expose or store the appliance at temperatures below 0°C (32°F) or above 45°C (113°F). Avoid direct exposure to sunlight.
23. Follow all charging instructions and do not charge the appliance outside of the temperature range of 0–45°C (32–113°F). Charging improperly or at temperatures outside of this specified range may damage the battery and increase the risk of fire.

SAVE THESE INSTRUCTIONS

This product is intended for household and commercial use

OPERATING INSTRUCTIONS

-Using your thumb, apply light to moderate pressure to the animal's pads in order to separate their toes. Hold paw firmly.

-Turn grinder "ON" by pressing the button on the front of the grinder. The indicator light will turn solid green. Press the power button to accelerate speed. To turn off, press the power button until the indicator light goes out and the grinder stops running.

-For best results, start grinding from the bottom of the nail, slowly moving toward the tip. Apply consistent pressure, moving the grinder from side to side of each nail.

-CAUTION: Do not over-grind or apply excessive pressure. (See FIG.1 'Nail Anatomy' for further information to safely grind your pets nails.)

6

7. Para apagar el aparato, oprima el botón de encendido hasta que la luz indicadora se apague.
8. Siempre use anteojos de seguridad cuando utilice el rebajador de uñas. No use piezas de joyería o prendas de ropa holgadas cuando lo utilice. Si tiene cabello largo, manténgalo recogido y fuera del área de trabajo.
9. No permita que el animal lama o toque el rebajador de uñas mientras lo usa.
10. Para prevenir daños a la uña, no mantenga la barra de lijado en un solo lugar, ni aplique presión excesiva a la uña mientras la rebaja.
11. Asegúrese de que los accesorios estén colocados firmemente antes de usarlos. Antes de cada uso revise que el tambor de lijado esté firmemente sujeto a la barra de lijado mientras se usa. Si la barra de lijado está floja durante el uso, puede salir despedida del rebajador y provocar lesiones.
12. Durante el uso, no coloque ni deje el aparato en un lugar donde pueda ser dañado por un animal o esté expuesto a la intemperie.
13. Prevenga los arranques accidentales. Asegúrese de que el interruptor está en la posición de apagado antes de levantar o transportar el aparato. Transportar el aparato con el dedo sobre el interruptor o conectar el aparato cuando

 
-To avoid tangling of hair on long-haired breed dogs, push hair away from pet's paw before applying the grinder. (Tip: Use a small nylon stocking or sock over the pet's paw and push the nails through a hole at the end to ensure only the nails are exposed.)

-For larger dogs, position the front paw forward in order to grind nails.

-For smaller dogs, hold their paw up and position it below their body. Pay extra caution not to entangle hair.

Accessories Key

- Nail Grinder
- Safety Cap
- 2 Large Sanding Drums
- USB Charging Cable
- Instruction Book

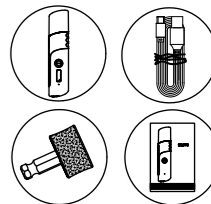

How To Trim

Keep your pet's nails trimmed properly for greater comfort and well being.

-Make sure the dog is relaxed and comfortable.

-Have the dog sit and talk to him/her softly to keep them calm.

-Always include a favorite treat during the session and at the end.

 
-Have a styptic powder or cornstarch readily available.

-Grasp the foot from the ankle up in the palm of your hand, firmly but gently.

-Position the grinder under the nail.

-Trim off a little of each nail. Be sure to avoid trimming into the 'quick'.

-If bleeding occurs, use styptic powder or cornstarch to stop the bleeding.

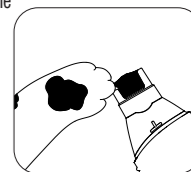

Changing Attachments

el interruptor está encendido son posibles causas de accidentes.

14. No use un aparato que esté dañado o modificado. Los aparatos y las baterías que se hayan dañado o modificado pueden comportarse de manera impredecible y provocar incendios, explosiones o riesgo de lesiones. 15. Do not crush, disassemble, heat above 100°C (212°F), or incinerate the appliance, due to risk of fire, explosion, or burns.
15. No aplaste este aparato, ni lo desarme, ni lo caliente a más de 100°C (212°F), ni lo incinere, ya que existe riesgo de incendio, explosión o quemaduras.
16. Si el aparato sufre maltratos, puede salir líquido despedido de la batería; evite el contacto con el líquido. Si ocurre contacto accidental, enjuáguelo con agua. Si el líquido entra en contacto con los ojos, también busque atención médica. El líquido despedido de la batería puede provocar irritación o quemaduras.
17. Siga todas las instrucciones de carga, y no cargue el aparato fuera del rango de temperaturas especificado en las instrucciones. Cargar la batería de forma incorrecta o a temperaturas fuera del rango especificado podría dañarla y aumentar el riesgo de incendio.

14

15

GARANTÍA LIMITADA
Válida en EE. UU. solamente

Esta garantía solo es válida para ventas en la parte continental de Estados Unidos. Para ventas fuera de la parte continental de Estados Unidos, comuníquese con su distribuidor local para conocer la garantía y sus términos.

Si su producto Wahl no funciona de forma satisfactoria durante un período de un (1) año contado a partir de la fecha original de compra o de recibirlo como regalo, Wahl lo reparará o reemplazará, a su criterio, y se lo devolverá SIN CARGO. Nuestra garantía no incluye partes que sufren desgaste normal, como las barras de lijado. Este producto no está destinado para uso comercial. Envíe su producto con franqueo pagado a Wahl Clipper Corporation, Sterling, Illinois 61081, Attention: Service Department, con una nota que describa el defecto y la fecha original en que se compró o se recibió como regalo (si está en garantía). Los productos fuera de garantía se repararán aplicando nuestros cargos de reparación estándar. Esta garantía será nula y no se realizará ninguna reparación o reemplazo bajo la misma si:

1. El producto es modificado de algún modo.
2. El producto ha sido reparado por alguna persona que no pertenece a Wahl Clipper Corporation o a un centro de servicio autorizado.
3. El producto ha sido utilizado de un modo que no es razonable. Esta garantía le otorga derechos legales específicos y usted también puede tener otros derechos que varían en cada estado. No se otorga ninguna otra garantía explícita por escrito. Toda garantía implícita, incluida cualquier garantía de comerciabilidad que pueda surgir del uso o de la compra, se limita al período de un (1) año especificado en la presente garantía explícita. Dicha limitación puede estar prohibida en algunos estados, así que podría no aplicarse a usted. No se asume responsabilidad alguna por daños accidentales o consecuentes de cualquier tipo, ni por el uso de accesorios no autorizados. Algunos estados pueden prohibir la exclusión o limitación de daños indirectos o consecuentes, de modo que esta limitación o exclusión puede no aplicarse a su caso.

Wahl Clipper Corporation
3001 Locust Street
P.O. Box 578
Sterling, Illinois 61081
Teléfono: 1.800.PRO.WAHL
www.wahl.com

10

 
11

12

13

14

15

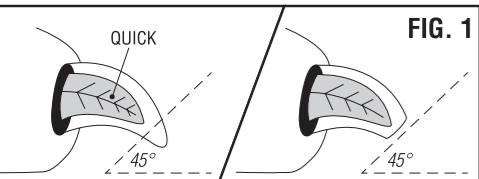

8

