


BEARD

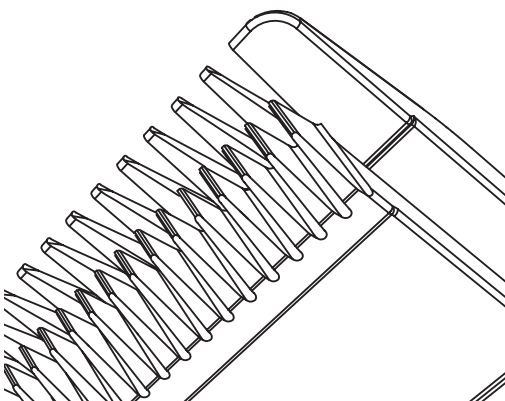

Operating Instructions for Cordless Battery Trimmer

Instrucciones de Operación para Su Recortadora de Pilas

Models 5537, 5606, 9906

5 or 6-Position Guide makes achieving a consistent trim easy, every time. The guide can be removed (providing an additional cutting position) and reattached without changing the preset cutting length, so once you have found the perfect length, there's no guesswork in achieving it every trim. The trimming guide is a two-piece assembly, consisting of a base and a comb. It should not be disassembled. To attach the guide, simply slide it on at a slight angle and press the release tab down to secure in position. To remove the guide, gently push up on the release tab and slide the assembly away from the trimmer. Adjust the trimming length by pressing on the thumb lever and moving the comb forward or backward to the desired setting.

GROWING A BEARD

There are three key factors that will determine which beard style is best for you:

1. The shape and dimensions of your face.
2. The natural growth of your beard.
3. The thickness of your beard. If you are unsure about the type of beard that would most suit your face, speak with a professional hair stylist or go to: grooming.wahl.com

3-YEAR LIMITED WARRANTY

Valid in U.S.A. Only

If your Wahl product fails to operate satisfactorily within three (3) years from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace the product and return it to you **FREE OF CHARGE. Do not return this product to store where purchased.** Products needing repair under this warranty should be returned with postage pre-paid to the following address or call 1-800-767-9245 for assistance:

**Wahl Clipper Corp.
Attn: Repair Department
3001 Locust Street
Sterling, Illinois 61081**

When mailing, please include a note describing the defect and the date of original purchase or receipt as a gift. Products out of warranty will be repaired at our standard repair charges.

This warranty does not cover products damaged by:

1. Modification or repair by anyone other than Wahl Clipper Corporation or a Wahl authorized service center;
2. Commercial (non-consumer) use or unreasonable use.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No other written express warranty is given. No responsibility is assumed for incidental or consequential damages of any type or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation may not apply to you. Warranty valid in U.S.A. only. Outside U.S.A., check with store for Wahl authorized distributor's warranty.

For more information or Product Registration, visit WahlUSA.com

© 2020 Wahl Clipper Corporation
Part No. 1004931
Printed in Vietnam

TRIMMING AND EDGING YOUR BEARD

The following are suggested trimming steps and trimmer positions. You may find different procedures work better for you.

1. Comb your beard in the direction that it grows to help reveal stray hairs that may be longer than the others.
2. Attach the 5-position trimming guide to trim and taper your beard. With the blades pointing toward you, begin with the trimming guide attachment set at a long trimming length.

For best results, start at each sideburn and stroke downward toward your neck. Trim toward your chin in smooth, overlapping strokes, following the lay of your beard. If you trim against the way your beard naturally lays, the trimmer will cut the hair much shorter and the result may be patchy.

Adjust the trimming guide to progressively shorter settings until you reach the desired length of beard. You may wish to set the trimming guide attachment to cut closer near the ear and down under the chin, changing to a longer setting toward the front of the face and point of your chin. When the trimming guide is removed, it will remain at its last length setting until you change it.

Always be sure the trimming guide is snapped solidly into the desired position before you start to trim.

3. Remove the trimming guide and cut the outline of your beard. Rotate the trimmer so that the blades are pointing toward you. Starting under your chin and working back toward your jawbone and ears, cut the outer perimeter of your beard underneath the jawbone. Continue the line all the way up to the ears and hairline.
4. Accentuate your beard line by using the trimmer in a downward motion. Start at the line you've created and, working from the chin back toward the ears, trim the area right under your beard line.
5. Define the upper part of your beard using the same technique.


SAVE THESE INSTRUCTIONS For Household Use Only

BATTERY INSTALLATION/REPLACEMENT


1. Remove battery cover from trimmer by pushing in and back on the plastic door in the direction of the arrow.
2. Insert two AA batteries as indicated by molded outline in trimmer.

IMPORTANT: Be sure to insert the negative (-) end of each battery first, so that it depresses the spring at the bottom of the battery compartment. Then slide the positive (+) end into position. Do not allow the negative terminal clips to bend and cut the casing of the batteries. Carbon or alkaline batteries may be used with your Wahl trimmer. Alkaline batteries will provide the longest operating time before battery replacement is needed. Trimmer should run approximately three hours on alkaline batteries.

3. Replace battery cover to its original position.
4. Move switch to "ON" position to use.
5. To maximize battery life, trimmer should be shut "OFF" immediately after using.
6. To replace batteries, complete Step 1, remove batteries one at a time.

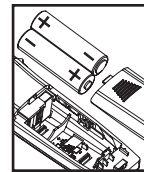

5537, 5606

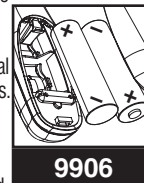

9906

TROUBLESHOOTING



If your trimmer fails to operate when switched "ON," check your batteries to see if they are properly installed. Positive end (center post) should be located as shown in battery housing. Make sure the switch is in the "ON" position and check to be sure blades are free to move. If blades become clogged with debris, manually pushing the blades back and forth a few times while unit is turned "OFF" may help free the blades and allow the trimmer to operate.

TRIMMING YOUR MUSTACHE

1. Comb your mustache.
2. Hold the trimmer in a vertical position with the blades pointing toward you in order to define the line of your mustache.
3. With the attachment set at a fairly long trimming length, begin trimming your mustache, starting at the top and working down to your upper lip. Use progressively closer settings to get the look and length you desire.
4. For tapering the mustache, set the 5-position trimming guide at a medium length. Starting in the middle of your mustache, follow the lip line and taper with short upward strokes of the trimmer, working out toward the corners until a gentle shape is created on the bottom of your mustache.
5. As a finishing step, remove the trimming guide and, using only the bare blades, make a definitive line at the bottom of your mustache.

TRIMMING WITH ATTACHMENT COMBS

Your trimmer includes three trimming attachments; stubble, medium and long. The stubble guide has 1 bar, the medium-cut attachment has two bars and the long-cut attachment has three bars. These attachments are ideal for blending, tapering and defining beards, as well as for achieving a "close trim" stubble look around the face. To use the attachments, go with the hair direction. To achieve closer looks, go against the hair direction.

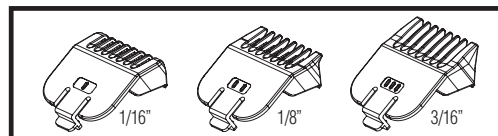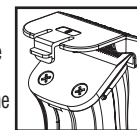

If it still does not operate, your batteries have probably exceeded their useful life. To maximize battery life, replace all batteries at the same time.


CARING FOR YOUR TRIMMER OILING BLADES

For best results, use Wahl Clipper Oil on the blades only when necessary, or approximately once a month. Motor bearings are permanently lubricated—do not attempt to oil.

When oiling your trimmer, turn the trimmer "ON - I," hold the unit with the blades facing DOWN and squeeze three drops across the front of the blade and one drop on each side on the heel of the blade. Wipe off excess oil with soft cloth.

NOTICE—DO NOT OVER OIL!

Excessive oiling or application of liquids will cause damage if allowed to seep back into motor.

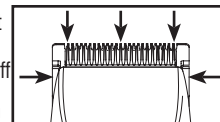

BLADE CARE

Trimmer blades have precision-hardened, ground and lapped cutting teeth. Blades should be handled carefully and never bumped or used to cut dirty or abrasive material. Never rinse the blades with water, or the blades may rust. Clean with the included brush.

CLEANING/STORAGE

Before storing your trimmer, use the cleaning brush to whisk any loose hairs from the unit and the blades. For units with a soft-touch grip, use a damp cloth to wipe down the body of the trimmer, taking care not to get the blades wet. Store unit in such a manner so that blades are protected from damage.

When the trimmer is not in use, the trimmer blade guard attachment should be in place to protect the blades.

This appliance should be stored in a manner where it is not subjected to crushing, heating above 100°C (212°F), or incineration.

SERVICE AND REPAIR

If you have problems with your trimmer, send it prepaid with a note explaining the problem to:

Wahl Clipper Corporation
Attn: Repair Department
3001 Locust Street
Sterling, IL 61081
Telephone (800) 767-9245

For products purchased outside the United States, contact your distributor.

60 Day Money Back Guarantee!

If for any reason within 60 days of purchase of your Wahl® trimmer you are not satisfied with your trimmer and would like a refund, just return your trimmer, together with the sales receipt, to the retailer from whom you purchased it. Wahl will reimburse all retailers who accept trimmers within 60 days of purchase. If you have any questions regarding this money-back guarantee, please call 1-800-767-9245 in the United States.


GUARDE ESTAS INSTRUCCIONES
Solamente Para Uso Residencial
INSTALACION Y REEMPLAZO
DE LAS PILAS

1. Quite la tapa de las pilas de la recortadora empujando hacia adentro y hacia atrás la puerta de plástico en el sen tido de la flecha.
 2. Introduzca dos pilas AA según viene indicado por el contorno moldeado de la recortadora.

IMPORTANTE: Asegúrese de introducir primero el extremo negativo (-) de cada pila, de modo que comprima el resorte de la parte inferior del compartimiento de las pilas. Deslice después el extremo positivo (+) hasta colocarlo. No deje que se doblen los contactos de los terminales negativos y corten el recubrimiento de las pilas.

Se pueden usar pilas de carbón o alcalinas con la recortadora Wahl. Las pilas alcalinas proporcionarán el máximo tiempo de operación antes de que sea necesario reemplazarlas. La recortadora debe funcionar aproximadamente tres horas con pilas alcalinas.

3. Vuelva a poner la tapa de las pilas en su posición original.
 4. Ponga el interruptor en la posición de encendido para usar la recortadora.
 5. Para prolongar al máximo la duración de las pilas, la recortadora debe apagarse inmediatamente después de utilizarse.
 6. Para reemplazar las pilas, complete el Paso 1, quitando las pilas de una en una.

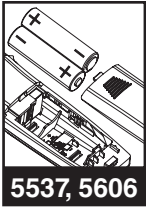


LOCALIZACIÓN Y REPARACION
DE FALLAS

Si la recortadora no funciona con el interruptor en la posición de encendido, compruebe las pilas para ver si están bien instaladas. El extremo positivo (saliente central) debe estar colocado según se indica en la caja de las pilas. Asegúrese de que el interruptor esté en la posición de encendido y compruebe para asegurarse de que las hojas puedan moverse libremente. Si las hojas se atascan con residuos, empujando manualmente las hojas unas cuantas veces hacia atrás y hacia adelante con la unidad apagada se pueden desatascar las hojas y hacer que funcione la recortadora. Si sigue sin funcionar, es probable que las pilas hayan excedido su vida útil. Para optimizar la duración de las pilas, reemplaza todas las pilas AA al mismo tiempo.

CUIDADO DE LA RECORTADORA
LUBRICACIÓN DE LAS HOJAS

Para lograr resultados óptimos, use aceite para cortadora de Wahl en las cuchillas solo cuando sea necesario o aproximadamente una vez al mes. Los cojinetes del motor están lubricados permanentemente. No trate de lubricarlos.

Cuando lubrique su recortadora, colóquela en posición de encendido ("ON – I"), sostenga la unidad con las cuchillas mirando hacia ABAJO y escurra tres gotas por la parte delantera de las cuchillas y una en cada lado de la parte plana de la cuchilla. Limpie el exceso de aceite con un paño suave.


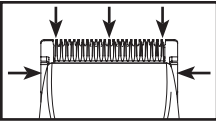


AVISO: ¡NO LUBRIQUE EXCESIVAMENTE!

La lubricación o aplicación de líquidos excesiva causará daños si se deja que se filtre y llegue al motor.

RECORTE CON 3 ACCESORIOS

Su recortadora incluyen tres cabezales para su bigote (mediano y largo) y una guía para la barba. El accesorio de corte medio tiene dos barras y el accesorio de corte corto tiene una barra. El igualador tiene dientes más largos que los accesorios de la recortadora media y corta y también puede usarse como accesorio para el recorte de barba. Estos accesorios son ideales para igualar, escalonar y definir bigotes. Para usar los accesorios, siga las instrucciones dadas para el adaptador de la mandíbula.

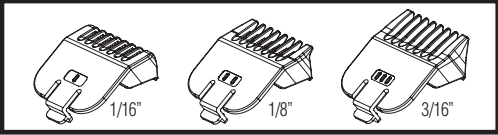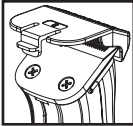

CUIDADO DE LAS HOJAS

Las hojas de la recortadora tienen dientes de corte endurecidos con precisión, rectificados y pulidos. Las hojas deben manipularse con cuidado y no golpearse nunca ni usarse para cortar materiales sucios o abrasivos. No enjuagar la cuchilla con agua, o las hojas se pueden oxidar. Limpiar con el cepillo incluido.

LIMPIEZA/ALMACENAMIENTO

Antes de guardar la recortadora, use el cepillo de limpieza para retirar los pelos sueltos de la unidad y hojas. Para las unidades con un agarre suave al tacto, utilice un paño húmedo para limpiar el cuerpo del recotador, teniendo cuidado para que no obtenga las hojas mojadas. Guarde la unidad de tal manera que las hojas estén protegidas contra los daños.

Cuando no se use la recortadora, el protector de hojas debe estar colocado para proteger las hojas.

Este aparato se debe guardar de manera que no sea sometido a aplastamiento, calentamiento a más de 100°C (212°F) o incineración.

Guía de 5 o 6 posiciones que hace que siempre se logre con facilidad un recorte uniforme. La guía puede quitarse (proporcionando una otra posición de corte) y volverse a conectar sin cambiar la longitud de corte prefijada, de modo que una vez que haya encontrado la longitud perfecta, no tenga que adivinar cuál es en cada recorte. La guía de recorte es un conjunto de dos piezas compuesto por una base y un peine. No debe desmontarse. Para conectar la guía, deslícela simplemente formando un ligero ángulo y pulse la lengüeta de desenganche hacia abajo para sujetar en posición. Para quitar la guía, empuje suavemente hacia arriba la lengüeta de desenganche y deslice el conjunto alejándolo de la recortadora. Ajuste la longitud de recorte haciendo fuerza hacia abajo sobre la palanca y moviendo el peine hacia adelante o hacia atrás hasta el ajuste deseado.

SERVICIO Y REPARACIÓN

Si tiene problemas con la recortadora, envíela con franqueo prepagado y una nota explicando el problema a:

Wahl Clipper Corporation
 Attn: Repair Department
 3001 Locust Street • P.O. Box 578
 Sterling, IL 61081
 Teléfono (800) 767-9245

Para productos comprados fuera de Estados Unidos, póngase en contacto con su distribuidor.

GARNATÍA 60 DIAS PARA DEVOLUCIÓN DE SU DINERO

Si por cualquier razón entre los 60 días de la compra de su recortadora de Wahl no esta satisfecho con su compra y desea una devolución de su dinero, regrese la recortadora junto con su recibo de compras a la tienda donde lo compro. Wahl reembolsara a las tiendas quienes acepta las recortadoras entre los 60 días de su compra. Si tiene preguntas tocantes esta garantía, por favor llamanos al 1-800-767-9245 en los Estados Unidos.

DEJARSE CRECER EL BIGOTE

Hay tres factores a tener en cuenta para determinar que estilo de bigote es el adecuado para usted:

1. La forma y las dimensiones de su cara.
 2. El crecimiento natural de su bigote.
 3. El grueso de su bigote. Si no está seguro cual es el tipo de bigote que más se adecua a su rostro, consulte a su estilista de confianza o vaya al: grooming.wahl.com

RECORTE Y BORDEADO DE LA BARBA

Se sugieren los siguientes pasos de recorte y posiciones de la recortadora. Tal vez pueda encontrar distintos procedimientos que le den mejor resultado.

1. Péínese la barba en el sentido de crecimiento para dejar al descubierto los pelos que sean más largos que los demás.
 2. Conecte la guía de recorte de 6 posiciones para recortar y dar forma a la barba. Con las hojas apuntando hacia usted y el interruptor apuntando en sentido contrario a usted, empiece con el accesorio de guía de recorte fijado a una longitud de recorte larga. Para obtener los mejores resultados, empiece en cada patilla y efectúe pasadas con el aparato moviéndolo hacia abajo, en dirección al cuello. Recorte hacia la barbilla con pasadas suaves superpuestas, siguiendo los contornos de la barba. Si recorta contra el sentido natural de los contornos de la barba, la recortadora cortará el pelo mucho más corto y el resultado será irregular. Ajuste la guía de recorte en posiciones progresivamente más cortas hasta que consiga la longitud deseada de la barba. Puede fijar el accesorio de guía de recorte para cortar más próximo a la piel junto a la oreja y debajo de la barbilla. Cuando se quite la guía de recorte, permanecerá en su último ajuste de longitud hasta que se cambie. Asegúrese siempre de que la guía de recorte esté firmemente encajada en la posición deseada antes de empezar a recortar.
 3. Quite la guía de recorte y corte el perfil de la barba. Gire la cabeza de recorte de modo que las hojas y el interruptor

GARANTÍA LIMITADA DE 3 AÑOS

Válida en EE. UU. Solamente

Si su producto Wahl no funciona de forma satisfactoria durante un período de tres (3) años contados a partir de la fecha original de compra o de recibirlo como regalo, Wahl reparará o reemplazará el producto a su criterio y se lo devolverá SIN CARGO. **No devuelve este producto a la tienda donde fue adquirido.** Los productos que necesiten ser reparados conforme a esta garantía deben enviarse con franqueo pagado a la siguiente dirección o llame al 1-800-767-9245 para obtener asistencia:

Wahl Clipper Corp.
Attn: Repair Department
3001 Locust Street
Sterling, Illinois 61081

Cuando envíe un correo, incluya una nota que describa el defecto y la fecha original en que se compró o se recibió como regalo. Los productos fuera de garantía se repararán aplicando nuestros cargos de reparación estándar.

Esta garantía no cubre los productos dañados por las siguientes causas:

1. Modificación o reparación efectuada por otra persona que no pertenezca a Wahl Clipper Corporation ni a un centro de servicio autorizado por Wahl;
 2. Uso comercial (no de consumidor) o no razonable.

Esta garantía le otorga derechos legales específicos y usted también puede tener otros derechos que varían en cada estado. No se otorga ninguna otra garantía explícita por escrito. No se asume responsabilidad alguna por daños indirectos o consecuentes de cualquier tipo, ni por el uso de accesorios no autorizados. Algunos estados pueden prohibir la exclusión o la limitación de daños indirectos o consecuentes, de modo que esta limitación puede no aplicarse a su caso. Garantía sólo válida en EE. UU. Fuera de EE. UU., consulte en la tienda sobre la garantía del distribuidor autorizado de Wahl.