



TIPS & TECHNIQUES

When you cut your hair, you should visualize the head as if it were divided into four sections. Image below shows the different sections. Using proper techniques when moving from one section to the next will help you blend the sections together for professional looking results.

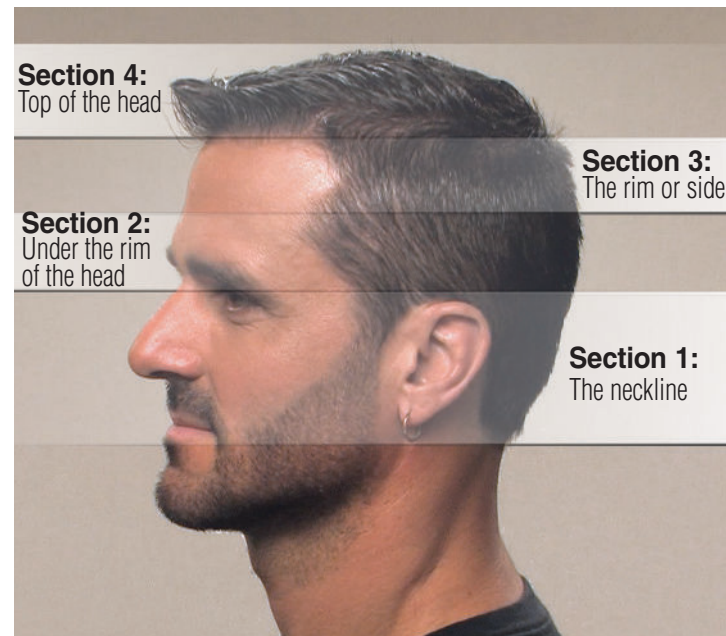


- The first time you cut hair, cut only a small amount of hair until you become accustomed to the length of hair each attachment guard provides.
- For best results, hair should be dry before using clipper.
- For best results, when cutting hair, go through hair at a slow, even speed. Don't force the clipper through the hair.
- For best results, go through the hair against the direction of your hair's growth, so you can catch more hair with the guard.
- The blades on your new clipper should be oiled every few haircuts.

STEP-BY-STEP GUIDE FOR CUTTING HAIR

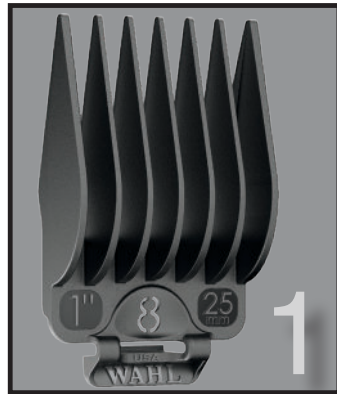

1. Comb hair and remove tangles. Add the largest attachment guard to the clipper.

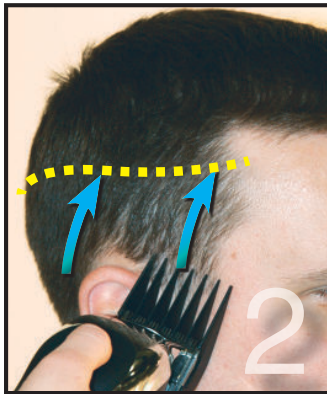

2. Start at hairline on side of head and cut up to middle of head. **Note: If cut hair is too long, repeat with next smaller guard.**




3. Continue around head repeating **step 2**.




4. You are now ready to cut the middle portion of the hair.




5. Use the attachment guard with the next highest number than in **step 3**. Example: If you used a #6 guard in **step 3**, select guard #7.

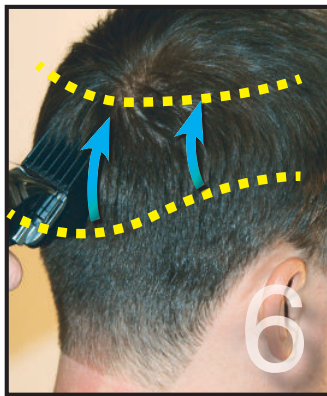

6. Continue cutting around middle portion of head as in **steps 2 and 3**.

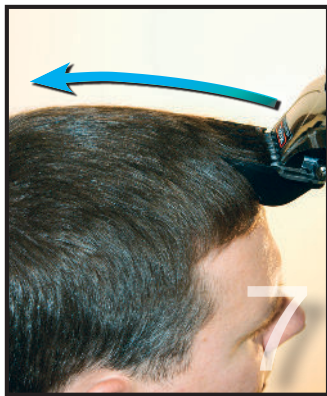

7. For cutting top of head, use the attachment guard with the next highest number than in **step 6**. Start at front bang area.

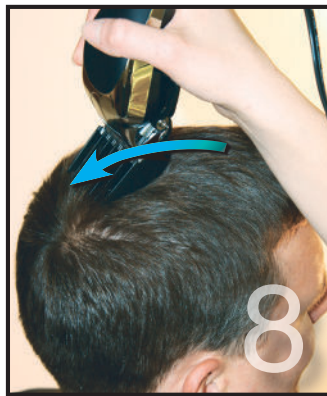

8. Cut across top of head. Comb hair on entire head to assess if further cutting is necessary.

BLENDING

When you want to blend from one section to the next, you will need to practice moving the clipper in an upward rocking motion. This motion will leave the hair slightly longer where the clipper pulls away from the scalp, enabling you to blend between the sections and achieve a smooth transition from one length of hair to the next. This technique will enhance the appearance of your haircuts.



1. Blend out any cut lines. Lines may form where you change guard sizes. Use the same guard used in **step 3**

2. Using a rocking motion, blend out the middle cut line.

3. Using the guard used in **step 8** repeat blending the top outline as needed.

DETAILING / OUTLINING



1. No attachments needed. Start with the sideburns.

2. Continue around ear as shown.

3. Trim neckline as shown.

Use clipper or battery trimmer (not all kits include a trimmer).

WARRANTY

5-YEAR LIMITED WARRANTY

Valid in U.S.A. Only. If your Wahl product fails to operate satisfactorily within five (5) years from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace the product and return it to you FREE OF CHARGE.

ELITE PRO / PRO SERIES / LIFEPROOF PRO CLIPPERS ONLY LIMITED LIFETIME WARRANTY (EXCLUDES BLADES)

Valid in U.S.A. Only. If your Wahl product fails to operate satisfactorily, Wahl will, at our option, repair or replace the product and return it to you FREE OF CHARGE.

REFURBISHED CLIPPERS

Valid in U.S.A. Only. If your Wahl product fails to operate satisfactorily within 90 days from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace the product and return it to you FREE OF CHARGE.

HOW TO GET WARRANTY SERVICE

Do not return this product to store where purchased. Products needing repair under this warranty should be returned with postage prepaid to:

Wahl Clipper Corp.
Attn: Repair Department
3001 Locust Street
Sterling, Illinois 61081

Or, call 1-800-767-9245 for assistance.

When mailing, please include a note describing the defect and the date of original purchase or receipt as a gift. Product out of warranty will be repaired at our standard repair charges.

WHAT THIS WARRANTY DOES NOT COVER

This warranty does not cover products damaged by: (1) Modification or repair by anyone other than Wahl Clipper Corporation or a Wahl authorized service center; (2) Commercial (non-consumer) use or unreasonable use.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No other written express warranty is given. No responsibility is assumed for incidental or consequential damages of any type or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation may not apply to you. Warranty valid in U.S.A. only. Outside U.S.A., check with store for Wahl authorized distributor's warranty.

WAHL® HOME PRODUCTS Corded Home Haircutting

For Household Use Only



Models MC, MC2, CNT2-M SC, SC2 (No taper lever)

Model MC3

Model PVCm

Model 79610

Model 79050

Blades (1) Detachable Blades (2) Taper Lever (3) Cord (4) On/Off Switch (5) Power Screw (6)

Artwork #91585-1101 v2023.02
© 2023 WAHL CLIPPER CORPORATION
P.O. Box 578, Sterling, Illinois 61081 USA

WAHL® HOME PRODUCTS

CLIPPER MAINTENANCE

OIL BLADES:

The blades on your new clipper should be oiled every few haircuts.

When oiling your clipper, turn the clipper "ON - I," hold the unit with the blades facing DOWN and squeeze three drops across the front of the blade and one drop on each side on the heel of the blade. Wipe off excess oil with soft cloth.

NOTICE—DO NOT OVER OIL!

Excessive oiling or application of liquids will cause damage if allowed to seep back into motor.

DO NOT USE HAIR OIL, GREASE, OR ANY OIL MIXED WITH KEROSENE OR ANY SOLVENT.

DETACHABLE BLADES: 79610 Clippers Only

REMOVING BLADES: 79610 Clippers Only

Before removing blades, make sure the on/off switch is turned to the "0" or "OFF" position.

- Hold the clipper in both hands. Using both thumbs, push the blades away from the front of the clipper.
- The blade set with the top and bottom blades will come off in one piece.

ATTACHING BLADES: 79610 Clippers Only

Before reattaching blades, make sure the on/off switch is turned to the "0" or "OFF" position.

- Place the blade at an angle (with the bottom portion of blade fitting into the clipper) so the outer white clips of the blade set sit just below the metal clips inside the clipper. Make sure blade is center aligned with clipper.
- While holding the bottom of the blade, push the blade onto the clipper with your thumb until blade "snaps" into place. Don't use excessive force to push blade into place.


CLEANING BLADES:

Use the cleaning brush(es) provided to remove hair from between the blades. **DO NOT USE WATER TO CLEAN THE BLADES.** For best results, after brushing the blades, add Wahl clipper oil to the blades.

TAPER LEVER:

MC, MC2, CNT2-M, MC3, PVCm, 79050 Clippers Only

The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut, ideal for blending and fading. Lever in "Up" Position = Closest Cut; Lever in "Down" Position = Longest Cut. Should the blades become jammed with hair, move the taper lever up and down several times to help free up the blades.

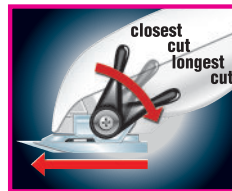

CORD / PLUG:

The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord untwisted and unobstructed. **YOUR CLIPPER HAS A POLARIZED PLUG:** To reduce the risk of electric shock, this appliance has a polarized plug (one plug blade is wider than the other). This plug fits in a polarized outlet only one way. In the event the plug doesn't fit fully in the outlet, reverse the plug. **DO NOT CHANGE THE PLUG IN ANY WAY.**

IF YOUR CLIPPER IS TOO NOISY:

MC, SC, SC2, MC2, CNT2-M, MC3 Clippers Only

(A) Oil blades as directed in previous portion of instruction booklet

(B) You can reduce the "clatter sound" by adjusting the power screw. The power screw was adjusted for peak efficiency before leaving the factory. However, if voltage in your home is too high or low, the clipper power screw may need adjustment.

ADJUSTING POWER SCREW TO REDUCE CLIPPER NOISE (excessive clattering):

1) Turn your clipper "ON"

2) Use the end of your detail cleaning brush or a screwdriver to turn power screw in a COUNTER CLOCKWISE direction until clatter goes away.

MAXIMUM POWER SETTING:

MC, SC, SC2, MC2, CNT2-M, MC3 Clippers Only

ADJUSTING POWER SCREW FOR MAXIMUM POWER SETTING:

1) Turn your clipper "ON"

2) Use the end of your detail cleaning brush or a screwdriver to turn power screw in a COUNTER CLOCKWISE direction until you start to hear a clattering noise.

3) Then turn the power screw in the opposite (counterclockwise) direction at least ¼ turn (clattering sound should have stopped).


ALIGNING CLIPPER BLADES:

MC, SC, SC2, MC2, CNT2-M, MC3, PVCm, 79050 Clippers Only

Your Wahl clipper blades were oiled and aligned before leaving our factory. Blades may need to be realigned if they have been bumped or removed for cleaning. To determine if realignment is necessary, compare your clipper blades with this sketch.

- 1) If your clipper has a taper lever, position the lever in the closest cut (up) position.
- 2) End of top (small) blade teeth should be approximately 1/32-inch (.64 mm) back from bottom (large) blade.
- 3) Extreme left-hand tooth of top blade must be covering or to the left of the first small tooth of bottom blade.
- 4) Extreme right-hand tooth of top blade must be touching the big tooth on the bottom blade.

If blade alignment is incorrect, add a few drops of Wahl Clipper Oil to the blades, turn clipper "ON" for a few moments, turn "OFF" and unplug. Loosen screws slightly and adjust. Tighten screws after blades are aligned. Other than blades, this clipper has no user-serviceable parts.

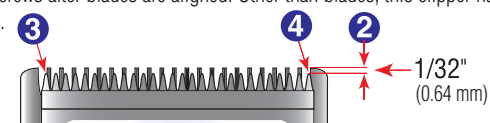

CUSTOMER SUPPORT



wahlUSA.com

help@wahlclipper.com

1.800.767.9245

Find us on social media:
@WAHLGROOMING



Clipper 101
How-To Info



Clipper Replacement
Parts & Accessories



Digital Copy of
Instruction Book

BUILT-IN TRIMMER

CONVERT TO A TRIMMER:

CNT2-M Clipper Only

- Open your detail trimmer by unsnapping the detail trimmer lid (Fig 1).
- Guide the detail trimmer lid over the clipper blade (like adding an attachment guard). The clipper blade must be positioned between the trimmer lid and detail trimmer guide fingers (Fig 2).
- Press down on the top center of detail trimmer lid to snap onto the clipper blade (Fig 3). Do not push on the detail trimmer blade.



(fig 1)



(fig 2)



(fig 3)

CONVERT BACK TO A CLIPPER:

- Unsnap the detail trimmer lid from the clipper blade by lifting the back of the trimmer lid (like removing an attachment guard) Fig (4). Lift the detail trimmer lid around the detail clipper blade.
- Close your detail trimmer by tucking the detail trimmer blade down starting on top side (Fig 5).
- Snap into place by pressing down on the top center of detail trimmer lid (Fig 6).



(fig 4)



(fig 5)



(fig 6)

- When exposed to excessive force such as dropping, the detail trimmer is designed to pop off rather than break. To re-attach your detail trimmer, simply snap the detail trimmer arm back into place (Fig 7).



(fig 7)

EASY-TO-USE ATTACHMENT GUARDS

ATTACHMENT GUARDS: Not all kits include the guards shown below

Attachment guards help you cut hair to a desired length by keeping the blades at a set distance from the skin, helping ensure an even hair length after cutting hair with a guard attached to the clipper. For easy reference, each guard is numbered and lists what length the hair will be after being cut using the noted size guard. Always start with a longer length guard (you can always use a shorter length guard if the length is not short enough). The first time you cut hair, cut only a small amount of hair until you become accustomed to the length of hair each attachment guard provides. To achieve an even "tapered" cut around the ears, use the LEFT and RIGHT tapered attachment guards. To trim eyebrow hair, use the BROW trim attachment guard. Before adding or removing guards from clipper, make sure the on/off switch is turned off (or in "0" position). Not all kits include all the different size and style of guards listed in this instruction sheet.

Your kit will include a set of either 'Standard' or 'Elite' attachment guards. Colors may vary.



ADDING:

While holding at a slight angle, place the attachment guard onto the clipper so the tips of the blade rests into the slots of the guard fingers. (Fig A)

Using your thumb, push down on the guard, where the guard size number is located, until you hear a "SNAP". (Fig B)



(fig A)



(fig B)



(fig C)

REMOVING:

While holding the top of attachment guard, place your thumb on the underside of the attachment guard tab. Push up on tab to remove guard from clipper. (Fig C)

SPECIALTY ATTACHMENT GUARDS: Not all kits include the guards shown below

The cutting length of the ear taper guards range from 3/16" (#1-1/2") to 1/4" (#4).



EAR TAPER GUARDS:

Attach the "R" RIGHT attachment guard to the clipper as directed.

Starting BEHIND the right ear (so shorter portion of guard fingers are closest to the ear), move the clipper upward and around towards the front side of the ear repeating as necessary. (Fig A)

Keep the "R" attachment guard on clipper. Starting on the FRONT of the left ear (so shorter portion of guard fingers are closest to the ear), move the clipper upward and around towards the back side of the ear repeating as necessary. (Fig B)



fig. A



fig. B

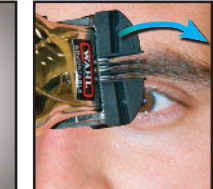


fig. C



fig. D

BROW TRIM GUARDS




Attach the BROW attachment guard to the clipper as directed above.

For longer cut length, start from just above your nose and slowly guide the clipper to the outside of your face.

For shorter cut length, start from outside of face and slowly guide clipper to the inside of your face.

CONSEJOS Y TÉCNICAS

Cuando corte su cabello, debe visualizar la cabeza como si estuviera dividida en cuatro secciones. La siguiente imagen muestra las diferentes secciones. El uso de técnicas adecuadas cuando se desplaza de una sección a la siguiente lo ayudará a combinar las secciones para obtener resultados de aspecto profesional.

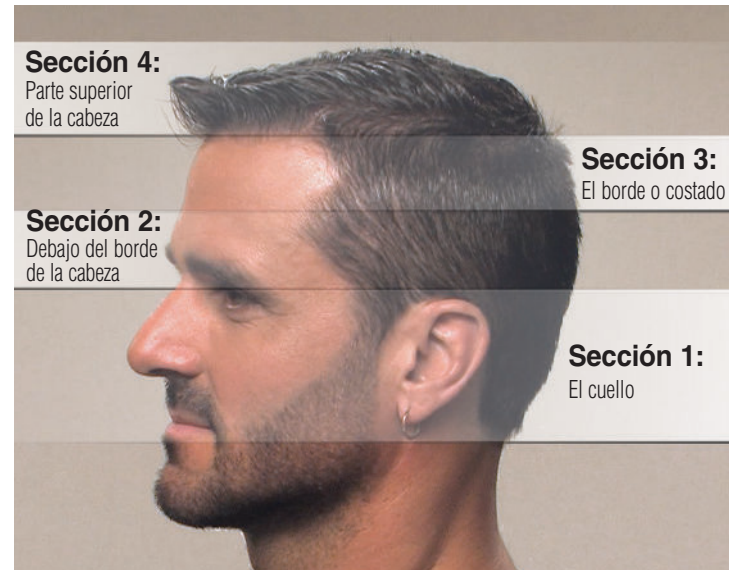

- La primera vez que corte el cabello, corte solo una pequeña cantidad hasta que se acostumbre al largo del cabello que logra con cada protector.
- Para obtener los mejores resultados, el cabello debe estar seco antes de utilizar la cortadora.
- Para obtener los mejores resultados, al cortar el cabello recórralo a una velocidad lenta y uniforme. No haga fuerza sobre la cortadora al pasarla por el cabello.
- Para obtener los mejores resultados, corte el cabello en contra de la dirección del crecimiento, para que pueda tomar más cabello con la protección.
- Las cuchillas de su nueva cortadora se deben aceitar cada varios cortes.

MANTENIMIENTO DE LA CORTADORA

ACEITE LAS CUCHILLAS:
Las cuchillas de su nueva cortadora se deben aceitar cada varios cortes.
Cuando lubrique su recortadora, colóquela en posición de encendido ("ON - I"), sostenga la unidad con las cuchillas mirando hacia ABAJO y escurra tres gotas por la parte delantera de las cuchillas y una en cada lado de la parte plana de la cuchilla. Limpie el exceso de aceite con un paño suave.

IMPORTANTE: ¡NO COLOQUE ACEITE EN EXCESO!
La aplicación excesiva de aceite o líquidos ocasionará daños si se filtran hacia el motor.
NO USE ACEITE PARA CABELLO, GRASA NI OTRO ACEITE MEZCLADO CON QUEROSENO U OTRO SOLVENTE.

CUCHILLAS DESMONTABLES: Solo para cortadoras 79610

CÓMO QUITAR LAS CUCHILLAS: Solo para cortadoras 79610
Antes de quitar las cuchillas, asegúrese de que el interruptor de encendido/apagado se encuentre en la posición "0" o "APAGADO".


- Sostenga la cortadora con ambas manos. Utilizando los dos pulgares empuje las cuchillas, separándolas del frente de la cortadora.
- El conjunto de cuchillas, con la cuchilla superior e inferior, saldrá en una sola pieza.

CÓMO COLOCAR LAS CUCHILLAS:
Solo para cortadoras 79610

Antes de volver a colocar las cuchillas, asegúrese de que el interruptor de encendido/apagado se encuentre en la posición "0" o "APAGADO".

- Coloque la cuchilla inclinada (con la parte inferior de la cuchilla encajada en la cortadora) de modo que los clips blancos en la parte exterior del conjunto de cuchillas estén justo debajo de los clips de metal en el interior de la cortadora. Asegúrese de que la parte central de la cuchilla está alineada con la cortadora.

GUÍA PARA CORTAR EL CABELLO PASO A PASO

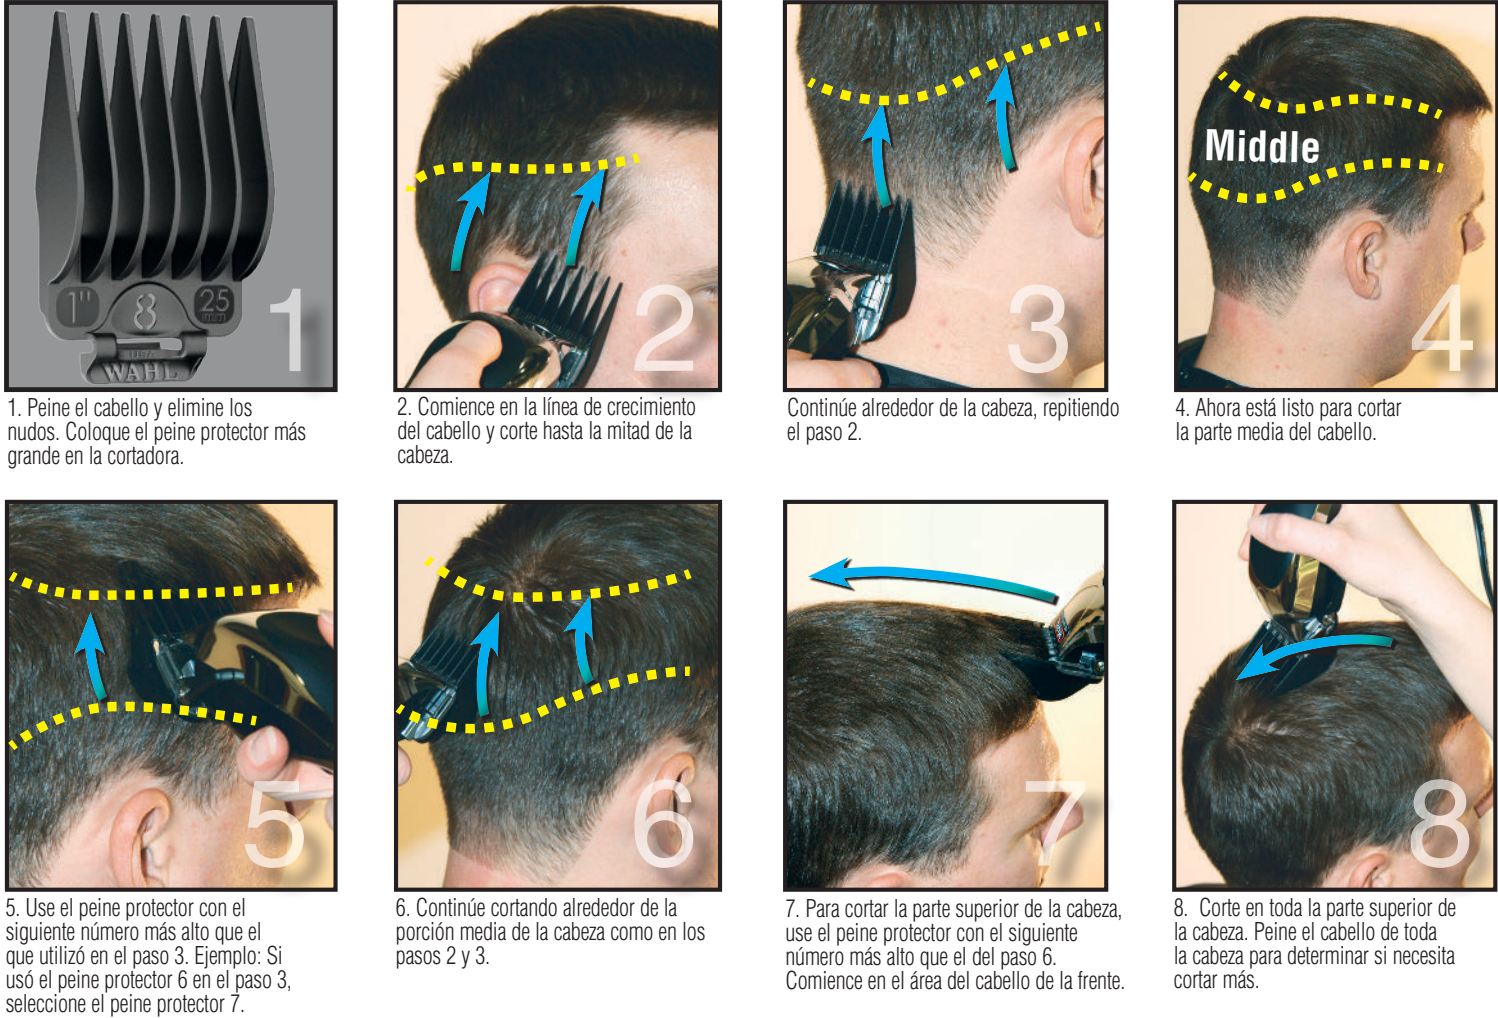

DESVANECIDO

Cuando desee desvanecer una sección con la siguiente, necesitará practicar cómo mover la cortadora en un movimiento oscilante hacia arriba. Este movimiento dejará el cabello levemente más largo en la zona en que la cortadora se aleja del cuero cabelludo, permitiéndole desvanecer la separación entre las secciones y obtener una transición uniforme desde una longitud de cabello a la siguiente. Esta técnica mejorará el aspecto de sus cortes de cabello.



1. Desvanezca todas las líneas de corte. Se pueden formar líneas en las partes en las que cambia el tamaño del peine protector. Use el mismo peine protector que usó en el paso 3.

DETALLAD / CONTORNO




1. No necesita accesorios. Comience con las patillas.

2. Continúe alrededor de la oreja, como se muestra.

3. Recorte la línea del cuello, como se muestra.

PEINES PROTECTORES:
Los peines protectores lo ayudan a cortar el cabello a un largo deseado al mantener las cuchillas a una distancia específica de la piel, lo que ayuda a garantizar que la longitud del cabello sea uniforme después de cortarlo con un peine protector colocado en la cortadora. Como referencia fácil, cada protector está numerado, y también especifica qué largo tendrá el cabello después de cortarlo con el peine protector del tamaño indicado. Siempre inicie con un protector de más longitud (siempre puede utilizar un protector más corto si descubre que el cabello no está lo suficientemente corto). La primera vez que corte el cabello, corte solo una pequeña cantidad hasta que se acostumbre al largo del cabello que logra con cada protector. Para lograr un corte "desvanecido" uniforme alrededor de las orejas, utilice las protecciones con reducción IZQUIERDA y DERECHA. Para recortar el pelo de las cejas, use el peine protector BROW (para cejas). Antes de añadir o retirar protectores de la cortadora, asegúrese de que el interruptor de energía esté apagado (o en la posición "0"). No todos los kits incluyen todos los tamaños y estilos de protectores que se indican en este instructivo.

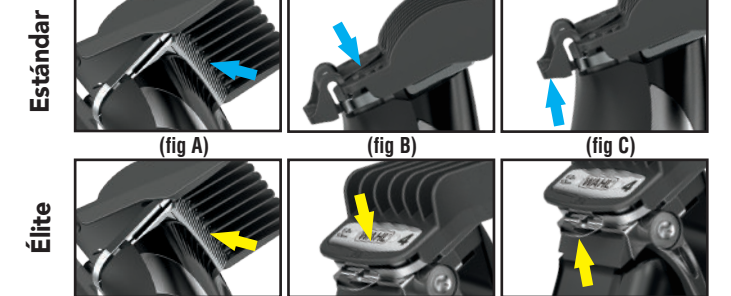

COLOCACIÓN:
Mientras lo sostiene ligeramente inclinado, coloque el protector sobre la cortadora de manera que las puntas de la cuchilla queden sobre las ranuras en los dientes del protector. (Fig. A)
Utilice su pulgar para empujar el protector hacia abajo, en donde se encuentra el número de tamaño, hasta que escuche un chasquido. (Fig. B)

DESMTAJE:
Mientras sostiene la parte superior del protector, coloque su pulgar en la parte inferior de la lengüeta del protector. Levante la lengüeta para sacar el protector de la cortadora. (Fig. C)

Su kit incluirá un juego de peines protectores 'estándar' o 'élite'.

RECORTADORA INTEGRADA

CONVERTIR A RECORTADORA: Solo para cortadora CNT2-M

- Abra su recortadora de detalles desabrochando la tapa de la recortadora de detalles (Fig. 1).
- Guíe la tapa de la recortadora de detalles sobre la cuchilla de la cortadora (como agregar un protector de accesorios). La cuchilla de la cortadora debe colocarse entre la tapa de la cortadora y los dedos guía de la cortadora de detalles (Fig. 2).
- Presione hacia abajo en el centro superior de la tapa de la recortadora de detalles para encajar en la cuchilla (Fig. 3). No presione la cuchilla de la recortadora de detalles.



CONVERTIR A UN CORTADORA:

- Desenganche la tapa de la recortadora de detalles de la cuchilla de la recortadora levantando la parte posterior de la tapa de la recortadora (como quitar un protector de accesorios) Fig. (4). Levante la tapa de la cortadora de detalles alrededor de la cuchilla de la cortadora de detalles.
- Cierre la recortadora de detalles metiendo la cuchilla de la recortadora de detalles hacia abajo comenzando por el lado superior (Fig. 5).
- Encaje en su lugar presionando hacia abajo en la parte superior central de la tapa de la recortadora de detalles (Fig. 6).



1. Cuando se expone a una fuerza excesiva como cayendo, el recortador de detalles está diseñado para estallar en lugar de romperse. Para volver a colocar la recortadora de detalles, simplemente vuelva a colocar el brazo de la recortadora de detalles en su lugar (Fig. 7).


PEINES PROTECTORES DE USO FÁCIL

PEINES PROTECTORES ESPECIALES:
No todos los juegos incluyen lo protectores que se muestran a continuación



PROTECTORES PARA OREJAS:
Coloque el peine protector DERECHO (R) en la cortadora como se indicó antes.
Comenzando DETRÁS de la oreja derecha (de modo que la parte del protector con los dientes más cortos esté más cerca de la oreja), mueva la cortadora hacia arriba y alrededor, hacia la parte frontal de la oreja, repitiendo el movimiento si es necesario. (Fig. A)

Deje el peine protector "R" en la cortadora. Comenzando en la parte DELANTERA de la oreja izquierda (de modo que la parte del protector con los dientes más cortos esté más cerca de la oreja), mueva la cortadora hacia arriba y alrededor, hacia la parte trasera de la oreja, repitiendo el movimiento si es necesario. (Fig. B)

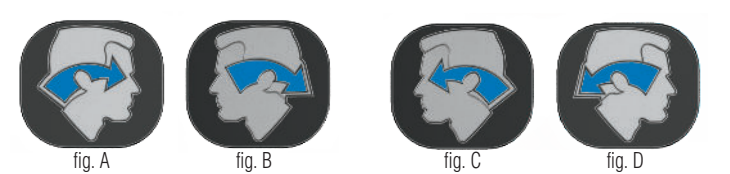

GARANTÍA

GARANTÍA LIMITADA DE 5 AÑOS
Válida solamente en EE. UU. Si su producto Wahl no funciona de forma satisfactoria durante un período de cinco (5) años contados a partir de la fecha original de compra o de recibirlo como regalo, Wahl reparará o reemplazará el producto a su criterio y se lo devolverá SIN CARGO.

SOLO PARA CORTADORA ELITE PRO / PRO SERIES / LIFEPROOF PRO
GARANTIA LIMITADA DE POR VIDA (EXCLUYE CUCHILLAS)
Válida solamente en EE. UU. Si su producto Wahl no funciona de forma satisfactoria durante un período de noventa (90) días contados a partir de la fecha original de compra o de recibirlo como regalo, Wahl reparará o reemplazará el producto a su criterio y se lo devolverá SIN CARGO.


CORTADORAS RECONSTRUIDAS
Válida solamente en EE. UU. Si su producto Wahl no funciona de forma satisfactoria durante un período de noventa (90) días contados a partir de la fecha original de compra o de recibirlo como regalo, Wahl reparará o reemplazará el producto a su criterio y se lo devolverá SIN CARGO.

CÓMO OBTENER EL SERVICIO DE LA GARANTÍA
No devuelva este producto a la tienda donde fue adquirido. Los productos que necesiten ser reparados conforme a esta garantía deben enviarse con franqueo pagado a:

Wahl Clipper Corp.
Attn: Repair Department
3001 Locust Street
Sterling, Illinois 61081

O llame al 1-800-767-9245 para recibir asistencia.
Cuando envíe un correo, incluya una nota que describa el defecto y la fecha original en que se compró o se recibió como regalo. Los productos fuera de garantía se repararán aplicando nuestros cargos de reparación estándar.
ESTA GARANTÍA NO CUBRE LO SIGUIENTE
Esta garantía no cubre los productos dañados por las siguientes causas: (1) Modificación o reparación efectuada por alguna persona que no pertenezca a Wahl Clipper Corporation ni a un centro de servicio autorizado por Wahl; (2) Uso comercial (no doméstico) o no razonable. Esta garantía le otorga derechos legales específicos y usted también puede tener otros derechos que varían en cada estado. No se otorga ninguna otra garantía explícita por escrito. No se asume responsabilidad alguna por daños indirectos o consecuentes de cualquier tipo, ni por el uso de accesorios no autorizados. Algunos estados pueden prohibir la exclusión o la limitación de daños indirectos o consecuentes, de modo que esta limitación puede no aplicarse a su caso. Garantía sólo válida en EE. UU. Fuera de EE. UU., consulte en la tienda sobre la garantía del distribuidor autorizado de Wahl.

ATENCIÓN AL CLIENTE

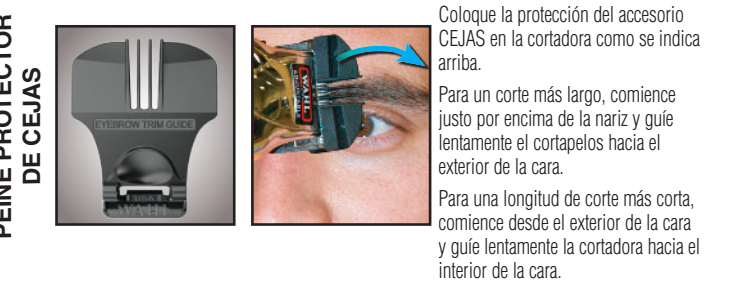

PEINE PROTECTOR DE CEJAS

help@wahlclipper.com 1.800.767.9245

Find us on social media:
@WAHLGROOMING

