

IMPORTANT SAFEGUARDS
When using an electrical appliance, basic precautions should always be followed, including the points listed below. Read all instructions and safeguards before using.

- DANGER** —
To reduce the risk of injury or death by electric shock:
1. Do not reach for an appliance that has fallen into water. Unplug immediately. Some electrical parts inside the clipper are electrically live, even with the switch "OFF".
 2. Do not use while bathing or in a shower.
 3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place it in or drop into water or other liquid.
 4. Always unplug this appliance from the electrical outlet immediately after using.
 5. Unplug this appliance before cleaning.

- WARNING** —
To reduce the risk of burns, fire, electric shock or injury to persons:
1. An appliance should never be left unattended when plugged in.
 2. Close supervision is necessary when this appliance is used by, on, or near children or disabled persons.
 3. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
 4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to Wahl Clipper Corporation for examination and repair.
 5. Keep the cord away from heated surfaces.
 6. Never operate the appliance with the air openings blocked or while on a soft combustible surface, such as a bed or couch, where air openings may be blocked. Keep the air openings (if any) free from lint, hair or the like.
 7. Never drop or insert any object into any opening on this appliance.
 8. Do not use outdoors or operate with aerosol (spray) products or where oxygen is being administered.
 9. Do not use this appliance with a damaged or broken comb nor with teeth missing from the blades, as injury may occur. Before use, make certain blades are aligned properly. (See Clipper Maintenance Instructions.)
 10. During use, do not place or leave appliance where it may be damaged by an animal or exposed to weather.
 11. To disconnect, turn all controls to "OFF", then remove plug from outlet.
 12. Turn all controls to "OFF" before attaching or detaching detail trimmer blades.
 13. The blades on your clipper have fine teeth for precise cutting. Handle carefully when against the skin in order to avoid scratching.
 14. When discarding an old battery, do not throw it into fire where heat could cause it to rupture, or explode. Also, do not attempt to recharge alkaline, heavy-duty or regular batteries in nickel-cadmium battery charger.

SAVE THESE INSTRUCTIONS

This Clipper Has Been Designed For Household Use Only

PRECAUCIONES IMPORTANTES

Al usar un aparato eléctrico, se deben tomar siempre precauciones básicas, incluidas las siguientes. Lea todas las instrucciones y precauciones antes de usar este aparato

PELIGRO—

- Para reducir el riesgo de muerte o lesiones por electrocución:
1. No trate de recoger un aparato que se haya caído al agua. Desenchúfelo inmediatamente de la toma de corriente. Algunos componentes eléctricos dentro de la cortadora siguen activos incluso con el botón de encendido en la posición OFF.
 2. No lo use mientras esté bañándose o en la ducha.
 3. No guarde este aparato, ni lo ponga en lugares donde pueda caer en un baño o lavabo. No lo sumerja ni lo deje caer al agua u otro líquido.
 4. Excepto cuando esté recargándose, desenchufe siempre este aparato de la toma de corriente inmediatamente después de usarlo.
 5. Desenchufe siempre este aparato antes de limpiarlo.

PRECAUCIÓN—

Para reducir el riesgo de quemaduras, fuego, electrocución, o daños las personas:

1. Un aparato eléctrico nunca debe dejarse desatendido, mientras esté enchufado a una toma de corriente
2. Es necesaria una vigilancia cercana cuando este electrodoméstico se use por o cerca de niños o minusválidos..
3. Utilice este electrodoméstico solamente para el uso para el que ha sido destinado tal y como se describe en este manual. No use accesorios no recomendados por el fabricante.
4. Nunca utilice este aparato cuando el cable y/o el enchufe presenten raspaduras o estén dañados, si no está funcionando correctamente, si se le ha caído o dañado, o si se ha caído en agua. Devuelva la máquina a Wahl Clipper Corporation para examen y reparación.
5. Mantenga el cable alejado de superficies calientes.
6. No utilice este aparato si tiene las aperturas de aire bloqueadas, o mientras esté sobre una superficie fácilmente combustible, como una cama o un sofá, donde las aperturas de aire se pueden bloquear. Mantenga las aperturas de aire (si existe alguna) libre de residuos, pelo u otros objetos.
7. Nunca deje caer o inserte algún objeto en cualquier apertura de este aparato eléctrico
8. No lo use al aire libre ni opere con productos de aerosol (Pulverizadores) o en lugares donde se administre oxígeno.
9. No use este aparato con los peines dañados o rotos, o cuando a las cuchillas les falte alguno de los dientes, ya que se podrán producir lesiones. Antes de su uso, asegúrese de que las cuchillas estén bien alineadas. (Vea Instrucciones de Mantenimiento de la Cortadora).
10. Durante su uso, no coloque o deje este aparato eléctrico donde pueda ser dañado por un animal o esté expuesto al aire libre.
11. Para desconectarlo, coloque todos los controles en la posición OFF, y

CLIPPER 5-YEAR LIMITED WARRANTY

(Valid in U.S.A. only)

If your Wahl product fails to operate satisfactorily within five (5) years from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace it and return it to you FREE OF CHARGE.

DO NOT RETURN THIS PRODUCT TO STORE WHERE PURCHASED. PRODUCTS NEEDING REPAIR UNDER THIS WARRANTY SHOULD BE RETURNED WITH POSTAGE PREPAID TO: WAHL CLIPPER CORPORATION, ATTN: REPAIR DEPARTMENT, 3001 LOCUST STREET, STERLING, ILLINOIS 61081

Include a note describing the defect and the date of original purchase or receipt as a gift (if in warranty). Products out of warranty will be repaired at our standard repair charges.

This warranty is void and no repair or replacement will be made under this warranty or otherwise if:

1. The product is modified in any manner.
2. The product is repaired by anyone other than Wahl Clipper Corporation.
3. The product has been subject to unreasonable use.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. No other written express warranty is given. Any implied warranty, including any warranty of merchantability which may arise from purchase or use, is limited to the five-year period provided in this express warranty. Some states may not allow such limitation, so it may not apply to you. No responsibility is assumed for incidental or consequential damages of any type, or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion may not apply to you. Warranty valid in U.S.A. only. Outside U.S.A., check with store for Wahl authorized distributor's warranty.

TRIMMER 2-YEAR LIMITED WARRANTY

(Valid in U.S.A. Only)


If your Wahl product fails to operate satisfactorily within two (2) years from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace it and return it to you FREE OF CHARGE. **Our warranty does not cover blades, which are wear out parts.** Please mail your product prepaid to Wahl Clipper Corporation, 3001 Locust Street, Sterling, Illinois 61081, Attention: Repair Department, with a note describing the defect and the date of original purchase or receipt as a gift (if in warranty). Products out of warranty will be repaired at our standard repair charges. This warranty is void and no repair or replacement will be made under this warranty or otherwise if:

1. The product is modified in any manner or repaired by anyone other than Wahl Clipper Corporation or Wahl authorized service center.
2. The product has been used commercially or subjected to unreasonable use.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. No other written express warranty is given. Any implied warranty, including any warranty of merchantability which may arise from purchase or use is limited to the years period provided in the express warranty. Some states may not allow such limitation, so it may not apply to you. No responsibility is assumed for incidental or consequential damages of any type or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion may not apply to you.

BATTERY TRIMMER INSTRUCTIONS

1. Remove battery cover from clipper by pushing in and back on the plastic door in the direction of the arrow.
2. **IMPORTANT:** Be sure to insert the negative (-) end of each battery first, so that it depresses the spring at the top of the battery compartment. Then slide the positive (+) end into position. Do not allow the negative terminal clips to bend and cut the casing of the batteries. Use alkaline batteries with your Wahl Clipper. Alkaline batteries will provide the longest operating time before battery replacement is needed. Trimmer should run approximately three hours on alkaline batteries.
3. Replace battery cover to its original position.
4. Move switch to "ON" position to use.
5. To maximize battery life, trimmer should be shut "OFF" immediately after using.

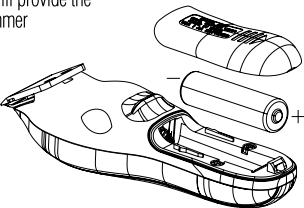

TROUBLESHOOTING:

If your trimmer fails to operate when switched "ON", check your batteries to see if they are properly installed. Positive end (center post) should be located as shown in battery housing. Make sure the switch is in the "ON" position and check to be sure blades are free to move. If blades become clogged with debris, manually pushing the blades back and forth a few times while unit is turned "OFF" may help free the blades and allow the trimmer to operate. If it still does not operate, your batteries have probably exceeded their useful life. To maximize battery life, replace all batteries at the same time.

CLIPPER MAINTENANCE




ALIGNING CLIPPER BLADES

Your Wahl clipper blades were oiled and aligned before leaving our factory. Blades may need to be realigned if they have been bumped or removed for cleaning. To determine if realignment is necessary, compare your clipper blades with this sketch.


1. If your clipper has a taper lever, position the lever in the close cut position.
2. End of top blade teeth should be approximately 1/32-inch (.64 mm) back from bottom blade.
3. Extreme left-hand tooth of top blade must be covering or to the left of the first small tooth of bottom blade.
4. Extreme right-hand tooth of top blade must be touching the big tooth on the bottom blade.

If blade alignment is incorrect, add a few drops of Wahl Clipper Oil to the blades, turn clipper "ON" for a few moments, turn "OFF" and unplug. Loosen screws slightly and adjust. Tighten screws after blades are aligned. Other than blades, this clipper has no user-serviceable parts.

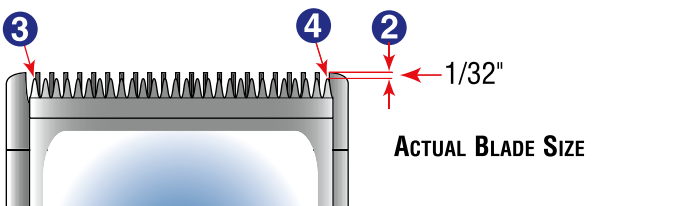

PARA USAR SÓLA CON LA RECORTADORA GROOMSMAN QUE FUNCIONA POR PILAS

1. Quite la tapa de las pilas de la cortadora empujando hacia adentro y hacia atrás la puerta de plástico en el sen tido de la flecha.
2. **IMPORTANTE:** Asegúrese de introducir primero el extremo negativo (-) de cada pila, de modo que comprima el resorte de la parte superior del compartimiento de las pilas. Deslice después el extremo positivo (+) hasta colocarlo. No deje que se doblen los contactos de los terminales negativos y corten el recubrimiento de las pilas.
- Use pilas alcalinas con la cortadora Wahl. Las pilas **alcalinas** proporcionarán el máximo tiempo de operación antes de que sea necesario reemplazarlas. La cortadora debe funcionar aproximadamente tres horas con pilas alcalinas.
3. Vuelva a poner la tapa de las pilas en su posición original.
4. Ponga el interruptor en la posición de encendido para usar la recortadora.
5. Para prolongar al máximo la duración de las pilas, la recortadora debe apagarse inmediatamente después de utilizarse.

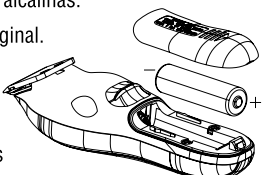

LOCALIZACIÓN Y REPARACION DE FALLAS:

Si la recortador no funciona con el interruptor en la posición de encendido, compruebe las pilas para ver si están bien instaladas. El extremo positivo (saliente central) debe estar colocado según se indica en la caja de las pilas. Asegúrese de que el interruptor esté en la posición de encendido y compruebe para asegurarse de que las hojas puedan moverse libremente. Si las hojas se atascan con residuos, empujando manualmente las hojas unas cuantas veces hacia atrás y hacia adelante con la unidad apagada se pueden desatascar las hojas y hacer que funcione la recortadora. Si sigue sin funcionar, es probable que las pilas hayan excedido su vida útil. Para optimizar la duración de las pilas, reemplaza todas las pilas AA al mismo tiempo.

OIL

The blades of your new clipper should be oiled every few haircuts. Place a few drops of Wahl Clipper Oil on the teeth of the blades as well as at the back of the blade. Use only the Wahl Clipper Oil included in the pack. Do not use hair oil, grease or any oil mixed with kerosene or any solvent.



POWER SCREW

Your clipper has a power screw and it has been adjusted for peak efficiency before leaving the factory. However, if voltage in your home is low, you may need to readjust it. To adjust power, turn your clipper "ON". Use the end of the cleaning brush or a screwdriver to turn power screw in a clockwise direction until you hear a noise. Then, slowly turn power screw in a counterclockwise direction, just until noise stops. This is the maximum power setting.


CORD

The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord untwisted and unobstructed.

If your clipper has a polarized plug: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits in a polarized outlet only one way. In the event the plug does not fit fully in the outlet, reverse the plug. In the event it still does not fit, contact a qualified electrician to install the proper outlet. **Do not change the plug in any way.**

TAPER LEVER

The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut. (Up position = closest cut; Down position = longest cut) Should the blades become jammed with hair, move the taper lever up and down several times. This will help free up the blades.

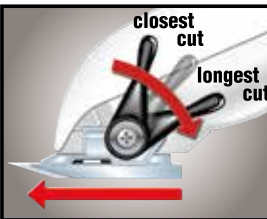

WAHL PRODUCT REGISTRATION

Please register your Wahl Clipper online at: www.grooming.wahl.com
Purchase Confirmation-

With the information you provide, we confirm the date of purchase of your product. This confirmation is of benefit to you, especially if your original proof of purchase is lost.

Proof of Ownership-

Your UPC number, item number and other information will be kept in our files for up to ten years.

For personal attention from one of our customer service representatives please contact us at:
www.grooming.wahl.com or 1-800-767-9245
© 2015 WAHL CLIPPER CORPORATION
P.O. Box 578, Sterling, Illinois 61081 USA
Part #94601-4601

MANTENIMIENTO DE MAQUINA




ALINEACIÓN DE LAS CUCHILLAS DE LA CORTADORA

Las cuchillas de la cortadora Wahl fueron aceitadas y alineadas antes de salir de nuestra fábrica. Tal vez haya que volver a alinear las cuchillas si fueron golpeadas o las quitaron para limpiarlas. Para determinar si el realineamiento es necesario, compare las cuchillas de la cortadora con esta ilustración.

1. Si la cortadora tiene una palanca de sesgo, ponga la palanca en la posición de corte corto.
2. La punta de los dientes de la cuchilla superior debe estar aproximadamente a 1/32-pulg. (.64 mm.) hacia atrás de la cuchilla inferior.
3. El diente del lado extremo izquierdo de la cuchilla superior debe estar cubriendo o hacia la izquierda del primer diente pequeño de la cuchilla inferior.
4. El diente del lado del extremo derecho de la cuchilla superior debe tocar el diente grande de la cuchilla inferior.

Si el alineamiento de la cuchilla es incorrecto, agréguale unas cuantas gotas de Aceite para Cortadora Wahl a las cuchillas, préndala durante un momento, apáguela y desconéctela. Afloje un poco los tornillos y ajústela. Apriete los tornillos después de alinear las cuchillas. Aparte de las cuchillas, esta cortadora no tiene ninguna otra pieza reparable por el usuario.

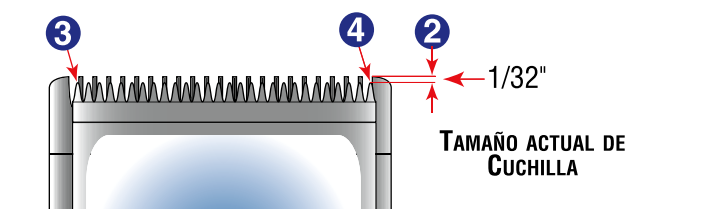

HOME HAIRCUTTING WITH WAHL HOME PRODUCTS



SPECIAL VALUE

This step by step home haircutting book gives users helpful tips and techniques to accomplish haircuts ranging from trendy popular styles to other classic styles.

VISIT

www.WahlHomeProducts.com/CostcoHowTo
to download Wahl's Home Haircutting Made Simple Book

The Brand Used
By Professionals

ACEITE

Hay que aceitar las cuchillas de la nueva cortadora cada varios cortes de cabello. Póngale unas cuantas gotas de Aceite para Cortadora Wahl a los dientes de las cuchillas. Use solamente el Aceite para Cortadora Wahl que se incluye en el paquete. No use aceite para el cabello, grasa, ni ningún otro aceite mezclado con queroseno o disolventes.

TORNILLO DE POTENCIA

La cortadora tiene un tornillo de potencia que fue ajustado para maximizar la eficiencia antes de salir de la fábrica. Sin embargo, si el voltaje de su casa es bajo, tal vez lo tenga que reajustar. Para ajustar la potencia, prenda la cortadora. Use la punta del cepillo limpiador o un destornillador para voltear el tornillo de potencia hacia la derecha, hasta que escuche un ruido. Luego, volteee lentamente el tornillo de potencia hacia la izquierda, justamente hasta que desaparezca el ruido. Ese es el ajuste de máxima potencia.

CABLE

El cable no se debe usar para halar la cortadora. Ya que hay que mantener la libertad de movimiento, hay que mantener el cable desenganchado y sin obstrucciones. Si la cortadora tiene un enchufe polarizado: Este dispositivo tiene un enchufe polarizado, para reducir el riesgo de choque eléctrico (una cuchilla es más ancha que la otra). Este enchufe solamente entra de una manera en un tomacorriente polarizado. En caso de que el enchufe no encaje completamente en el tomacorriente, inviértalo. En caso de que definitivamente no encaje, onláctele a un electricista competente para que le instale el tomacorriente adecuado. No cambie el enchufe de ninguna manera.

PALANCA DE SESGO

La palanca de sesgo le da versatilidad a la cortadora, permitiéndole cambiar gradualmente la proximidad del corte. (Posición arriba = corte más corto, Posición abajo = corte más largo) si las cuchillas se atarrancan con cabello, mueva la palanca de sesgo hacia arriba y hacia abajo, varias veces. Eso ayuda a soltar las cuchillas.




Para la atención personal de uno de nuestros representantes de información y reclamaciones por favor póngase en contacto con nosotros al siguiente informacón:
www.grooming.wahl.com
or
1-800-767-9245


STYLE GUIDE

Guide Combs

Guide combs help you cut hair to a desired length by keeping the blade at an appropriate distance from the skin. They are numbered and list the length of the hair to a desired hair length after a pass of the comb.

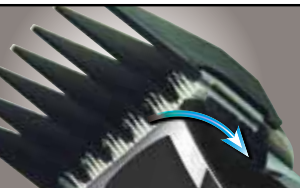

ATTACHING GUIDE COMBS
Align comb onto blade then press tab until you hear a snap.

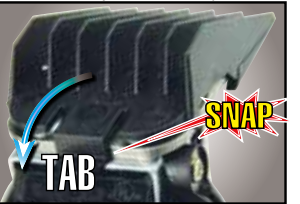

- NOTE:**
- 1) Always start with the largest guide comb, then use shorter combs if a shorter length is desired.
 - 2) Cut only a small amount until you become accustomed to how long each guide comb leaves the hair.
 - 3) Cut slowly and smoothly. Do not force the clipper through the hair.

#1 - (3mm) 1/8"

#2 - (6mm) 1/4"

#3 - (10mm) 3/8"

#4 - (13mm) 1/2"

#5 - (16mm) 5/8"


#6 - (19mm) 3/4"

#7 - (22mm) 7/8"

#8 - (25mm) 1"

Left Ear Taper

Right Ear Taper

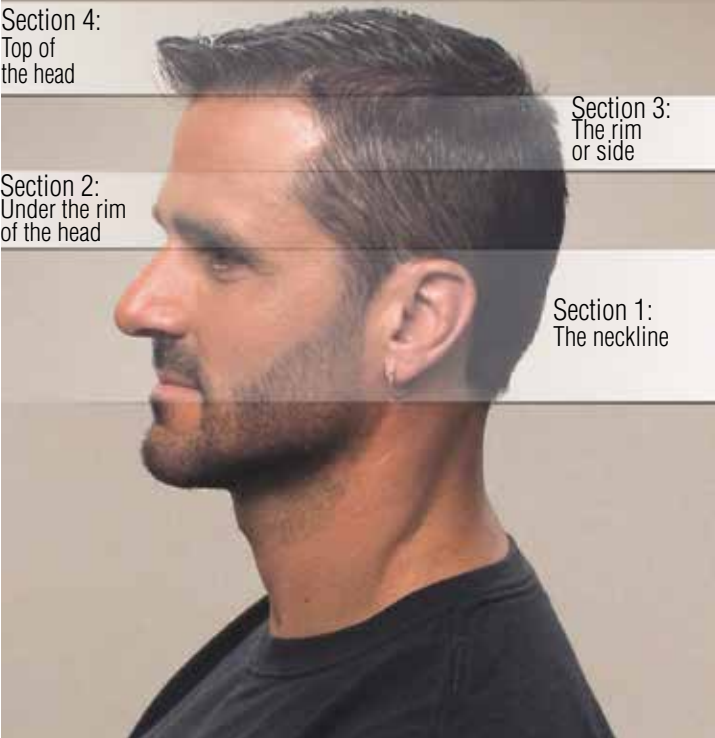

Tips and Techniques

When you cut hair, you should visualize the head as if it were divided into four sections. Image above shows the different sections. Using proper techniques when moving from one section to the next will help you blend the sections together for professional looking results.



1. Comb hair and remove tangles. Attach the largest guide comb to the clipper. Make sure the taper lever is in the up position.



2. Start at hairline on side of head and cut up to middle of head. **Note: If cut hair is too long repeat with next smaller guide comb.**




3. Continue around head repeating step 2.




4. You are now ready to cut the middle portion of the hair.



5. Use the comb with the next highest number than in step 3. Example: If you used a #6 comb in **step 3**, select comb #7.

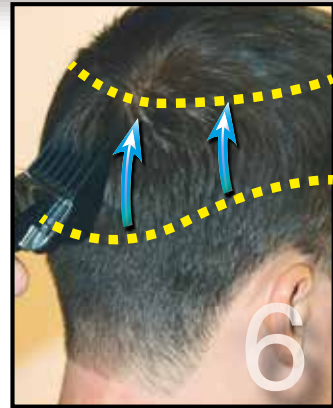

6. Continue cutting around middle portion of head as in steps 2 and 3.

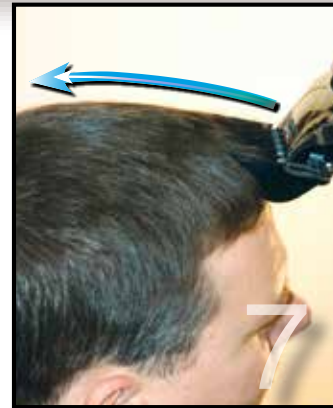

7. For cutting top of head, use the comb with the next highest number than in **step 6**. Start at front bang area.



8. Cut across top of head. Comb hair on entire head to assess if further cutting is necessary.

1ST TIME CUTTING HAIR

The first time you cut hair, cut only a small amount of hair until you become accustomed to the length of hair each guide comb provides.

- Start by attaching the largest guide comb on the clipper.
- Then use shorter combs if a shorter length is desired.
- For uniform cutting, cut at a slow even speed.

Tapering

To remove more bulk from behind the ears, use the left ear tapered guide comb. Start behind the ear and arch the clippers around the ear for a clean line, repeating the steps on the right side using the right ear tapered guide comb.



1. Attach the left ear guide comb to the clipper. Put taper lever in down position.



2. Hold the clipper at a slight angle just back of the ear at the hairline. Hold top of ear down.

3. Move the clipper upward and around the ear. Repeat the same for the right ear with the right ear guide comb.

Blending

When you want to blend from one section to the next, you will need to practice moving the clipper in an upward rocking motion. This motion will leave the hair slightly longer where the clipper pulls away from the scalp, enabling you to blend between the sections and achieve a smooth transition from one length of hair to the next. This technique will enhance the appearance of your haircuts.



1. Blend out any cut lines. Lines may form where you change comb sizes. Use the same comb used in **step 3** with taper lever in down position.

2. Using a rocking motion, blend out the middle cut line.

3. Using the comb used in **step 8** repeat blending the top outline as in step 10.

Outlining


Then clean up your sideburns, neckline and around the ears using the matching detail trimmer.




GUÍA DE ESTILO

Lista de peines con guía

Los peines de guía ayudan a cortar el pelo a la longitud deseada manteniendo la cuchilla a una distancia apropiada de la piel. Están numerados e incluyen la longitud del pelo a una longitud deseada después de pasar el peine.

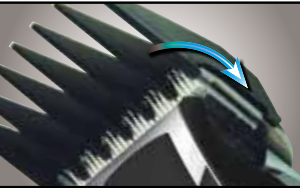

CONEXIÓN DE LOS PEINES CON GUÍA
Alinee el peine sobre la cuchilla luego apriete la lengüeta hasta que la escuche encajar.

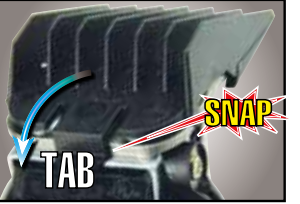

- ¡NOTA!**
- 1) Siempre empiece con el peine con guía más grande, luego use peines más cortos si quiere menos longitud.

#1 - (3mm) 1/8"

#2 - (6mm) 1/4"

#3 - (10mm) 3/8"

#4 - (13mm) 1/2"

#5 - (16mm) 5/8"

#6 - (19mm) 3/4"

#7 - (22mm) 7/8"

#8 - (25mm) 1"

Left Ear Taper

Right Ear Taper



Consejos y técnicas

Al cortar pelo, debe ver la cabeza como si estuviera dividida en cuatro secciones. La imagen de arriba muestra las distintas secciones. El seguimiento de las técnicas apropiadas al pasar de una sección a la otra le ayudará a combinarlas con resultados profesionales.



1. Peine y desenrede el cabello. Póngale el peine con guía más grande a la cortadora. Compruebe que la palanca de sesgo esté en la posición de arriba.



2. Empiece en el margen del cabello al lado de la cabeza y corte hasta la mitad de la cabeza. Nota: Si el cabello que corta está demasiado largo, repita el proceso con el peine siguiente y más pequeño.




3. Siga alrededor de la cabeza, repitiendo el paso 2.




4. Ya está listo para cortar la porción intermedia del cabello.



5. Use el peine del número ascendente que sigue al del paso 3. Ejemplo: Si usó un peine #6 en el paso dos, escoja el peine #7.

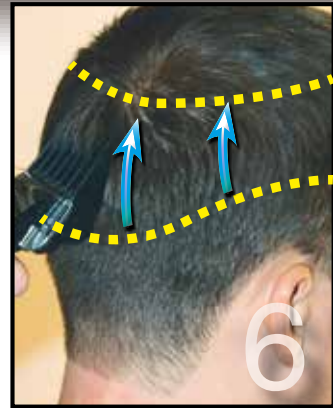

6. Siga cortando alrededor de la porción intermedia de la cabeza como en los pasos 2 y 3.

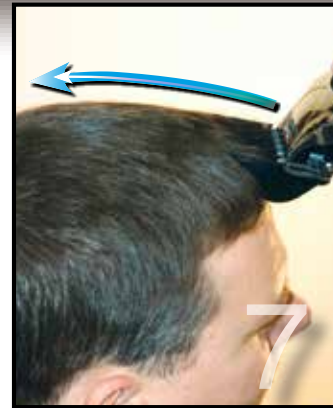

7. Para cortar encima de la cabeza, use el peine del número superior siguiente al del paso 6. Empiece al frente por la capul.



8. Corte a lo largo de la parte superior de la cabeza. Peine todo el cabello para ver si necesita cortarlo más.

PRIMERA VEZ CORTANDO CABELLO

Corte solamente una pequeña cantidad hasta que se acostumbre a la longitud de cada peine con guía.

- Siempre empiece con el peine con guía más grande.
- Luego use peines más cortos si quiere menos longitud.
- Corte lenta y suavemente.

Sesgo

Para quitar más volumen detrás de las orejas, utilice la peinetita de guía sesgada para la oreja izquierda. Empiece detrás de la oreja y corte alrededor en forma detallada, repitiendo los pasos en el lado derecho, utilizando la guía sesgada para la oreja derecha.



1. Póngale el peine con guía izquierdo a la cortadora. Ponga la palanca de sesgo en la posición de abajo.



2. Sostenga la cortadora ligeramente inclinada hacia la oreja en el margen del cabello. Sostenga agachada la parte superior de la oreja.



3. Mueva la cortadora hacia arriba y alrededor de la oreja. Repita lo mismo con el peine con guía para la oreja derecha.

Convergencia

Cuando quiera combinar una sección con la otra, debe practicar moviendo la recortadora en un movimiento ascendente y ondulante. Ese movimiento dejará el pelo ligeramente más largo donde la recortadora se separa del cuero cabelludo, permitiéndole combinar las secciones con buena transición de una longitud de pelo a la otra. Dicha técnica mejorará el aspecto de los cortes de pelo.



1. Combine toda línea de corte. Las líneas se forman al cambiar el tamaño de los peines. Use el mismo peine que usó en el paso 3 con la palanca de sesgo en la posición de abajo.

2. En movimiento mecedor recorte las líneas de en medio

3. Repita la combinación de la línea superior como en el paso 10, usando el peine del paso 8.

Delineamiento

Luego, retoque las patillas, el cuello y alrededor de las orejas con la recortadora para detallar.

